

ACTIVESHOP®

INSTRUCTIONS FOR USE

CASSETTE DUST ABSORBER MOMO S41

Model: SPT-410



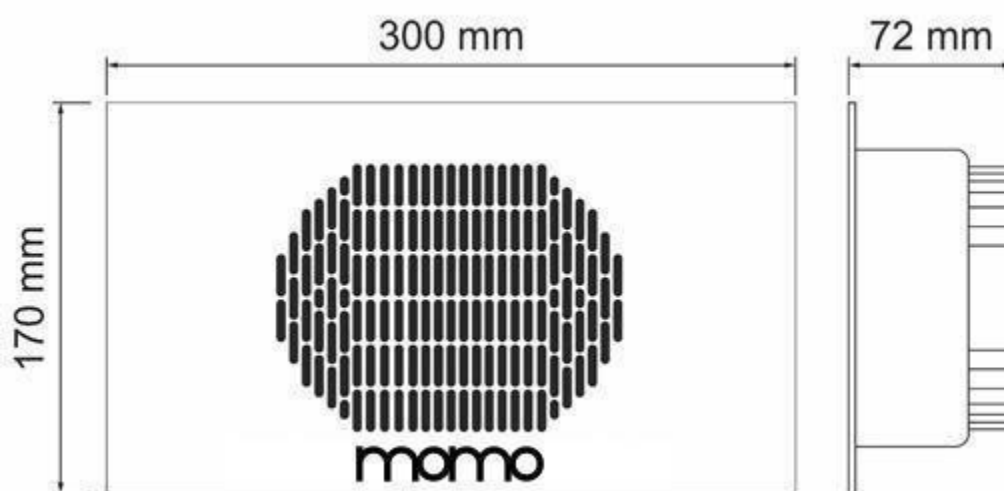
Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/03/2024



Technical data:

Model	SPT-410
Rated voltage	220 - 240 V 50Hz
Electrical power	40W
Number of fans	1
Dimensions	30x17x7,2 cm

Dimensions:**Notes and Recommendations:**

- It is not allowed to use the device near a bathtub, sink or other wet vessel.
- When connecting the plug, do not touch its metal parts.
- It is not allowed to wrap the power cord around the device, this may cause the cord to malfunction.
- Always make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly inserted into the outlet.
- Failure to do so may result in fire, electric shock or burns
- Do not plug or unplug the device from the outlet with wet or damp hands.
- Do not use the device under the following conditions:
 - When the cord or plug is hot or damaged;
 - When the plug is loose in the outlet;
- The cord must not be modified, stretched, excessively bent or twisted.
- Nothing heavy may be placed on the cord.
- Prevent dust or other harmful elements from getting into the plug.
- Do not use or store the device in the bathroom or other rooms with high humidity. This may lead to electric shock, fire or insulation damage.

- Do not allow children to use the device.
- Do not use the device near flammable substances such as alcohols, solvents, gasoline, spray aerosols, etc. This may lead to explosion or fire.
- Do not hit or throw the device. If the device is damaged by impact or falling, you cannot continue to use it.
- Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center.

Installation instructions

1. Cut a through hole in the countertop. Remember that the hole should not be larger than the grille. Otherwise, the grille may fall in.
2. Glue the canister absorber to the countertop with glue or double-sided tape.

Maintenance of the device:

- The filter in the absorber is disposable (1 bag is per nail service for one client). After use, it loses its properties. Repeated use of a disposable bag may result in dusty fan motors.
- Clean the device periodically to prevent the accumulation of dirt, dust and other undesirable substances. Accumulation of the above, may lead to malfunction of the device or even damage to the equipment.
- Clean the fans every 7 days of operation using compressed air (blow the fans from the top and bottom).

User instructions

- Check the usefulness of the filter (bag) of the absorber.
- If necessary, replace the filter.
- Connect the device to the power supply cable.
- Using the power switch, start the unit and enjoy trouble-free operation, remembering to keep the filter clean on a regular basis. - Disconnect the unit from the power supply and empty the dust bag after finishing work.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetology personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been overturned or its housing has been damaged.
4. Do not lay any objects on the cables. Do not install the device in places where someone may step on the power cord.

5. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
7. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
8. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC Concerning waste electrical and electronic equipment, waste electrical equipment should be disposed separately and then transferred to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIVESHOP SP. Z O.O. Company.

STORAGE AND TRANSPORTATION

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.