

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Activ Power Milling Machine N20



Importer:

ACTIVESHOP Sp. z o.o.
ul. Graniczna 8b, bud. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/05/2024



Technical data

Rated voltage	220V/240V
Electrical power	35W
Rated frequency	50/60Hz
Torque	3.5 N.cm
Head weight	160g
Dimensions of the head	13.5cm x 2.7cm

Note

1. Clean the device periodically to prevent accumulation of dirt, dust and other undesirable substances. Accumulation of the above, may lead to malfunction of the device or even damage to the equipment.
2. It is not allowed to wrap the power cord around the device, it may cause malfunction of the cord.
3. Always make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly inserted into the outlet. Failure to do so may result in fire, electric shock or burns
4. The cable must not be modified, stretched, excessively bent or twisted.
5. Nothing heavy may be placed on the cord.
6. Prevent dust or other harmful elements from getting into the plug, base or head by using dust absorbers.
7. Do not hit or throw the device. If the device is damaged by impact or falling, you cannot continue using it.
8. Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center.

Installation

1. Identify the location of all connectors
2. Insert the head cable plug, according to the position of the pins in the socket.
3. Make sure the base is turned off before connecting the head.

Connecting the foot pedal

- Visually assess whether there is any damage to both the base and the controller plug.
- Connect the foot controller plug to the base.
- To use the foot controller control, switch the On/Off/Foot Control button to "foot" foot mode.

Preparation before use

- Make sure the head speed has been set to the minimum level.
- Make sure the cutter is properly locked. If not, use the "twist lock" switch.
- While holding the head, turn on the power button.

Use of the product

- Using the potentiometer, set the desired speed.
- Wanting to increase the working speed, move the potentiometer to the right.
- Wanting to decrease the working speed, move the potentiometer to the left.

Setting left/right rotation

- The direction of rotation of the workpiece, can be changed with the switch located on the base (FOR/REV). Changing the direction of rotation is possible only when the motor is switched off.

Changing modes

- Select desired mode with the HAND/FOOT button, located on the base.
- HAND - operation head behind potentiometer.
- FOOT - operation head after using the

foot switch, after first setting the speed on a potentiometer connected to the base.

Milling cutter replacement

To replace the cutter, turn the Twist Lock knob counterclockwise in the "R" direction.


At this point, you can replace the cutter out of the spindle and replace it with a new one.

Once the cutter is in the spindle, turn the Twist Lock knob to the right, in the direction of "S" until you hear the characteristic "click".


The desired speed of the cutter depends on the type and material of the cutter. In this regard

In this regard, refer to the information provided by the manufacturer

***Never switch the Twist-Lock knob during operation.**

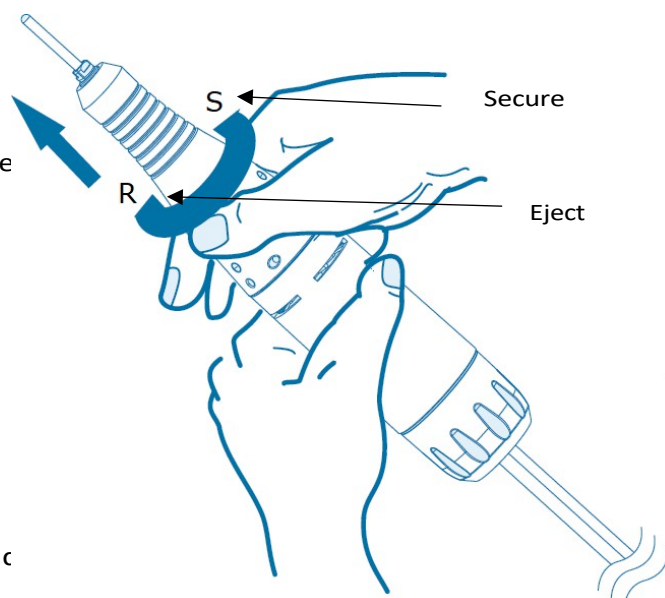

Cutter diameter	Rotation max.
5mm	41000
7mm	30000
10mm	20000
13mm	16000

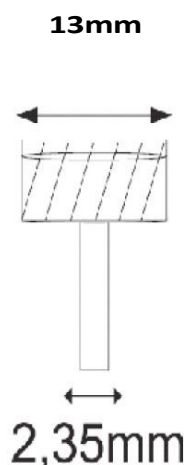

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows you to avoid undesirable consequences during the procedure.

2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).

3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.

4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:

(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been overturned or its housing has been damaged.

5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on how to use the equipment in a safe manner, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for the disposal of this type of equipment

equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then transferred to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.