

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Podiatric hydraulic chair 112



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, bud.
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/06/2025



Scan for
different
languages



Before using the cosmetic chair, read the enclosed instructions and perform the following steps:

1. Make sure all packaging items have been removed.
2. Make sure the chair is in working order.
3. Place the chair in the area where it will be used.

Cleaning and maintenance:

- To keep the chair's surface in good condition, clean it regularly. Remember to clean and disinfect the chair after each use. It is recommended to perform a thorough disinfection once a month.

I Metal and plastic surfaces

- To clean metal and plastic surfaces, wipe them with a damp cloth. To clean hard-to-reach areas or corners, a small brush will work best.
- Do not use too much liquid to clean the device. Then disinfect the device with a suitable liquid.

II Stainless steel surfaces

- Best will work will be cleaning with a mild solution detergent. Ammonia i most solvents can be used to remove tough stains. Avoid chlorine-based solutions.

III Painted or chrome-plated metal surfaces

- Do not use water jets (showers, high-pressure water cannons) for cleaning.
- Do not clean in high temperature and high humidity. Do not expose the device to conditions that may lead to liquid contamination.
- Do not use solvents and acids for cleaning.

IV Chair surface

- Wipe the seat surface evenly with a special leather cleaner, then wipe it with a clean, soft cloth.

Maintenance

1. Repairs should be performed by experienced and manufacturer-authorized personnel. Repairs by unauthorized personnel may cause injury or damage to the device, for which the manufacturer is not responsible.
2. Use only original spare parts approved by the manufacturer.
3. All maintenance and repair work must be documented.

If you find any defects, stop using the equipment and contact an authorized service center. Only experienced or authorized personnel can open or replace the actuator / control unit.

Technical data:

- Maximum load 150kg
- Weight 49.2kg
- PU/PVC leather

Device dimensions:



Dimensions of the base 76 x 60 cm.

Attention!

- Ensure that children do not play near the chair without adult supervision.
- Do not put your hand or foot in the crevices of the chair.
- Do not expose the chair to direct sunlight.
- Do not push or pull the chair on an uneven floor.
- Do not stand on the chair.
- The chair should not be used by people with physical limitations, sensory disorders or mental problems.

Footrest adjustment:

Each footrest is adjusted separately using the levers underneath. To adjust the footrest, pull the lever and tilt the footrest to the desired position. The footrests can also be adjusted laterally.

Backrest adjustment:

The position of the backrest can be adjusted using a lever located at the armrest. Pull the levers and tilt the backrest backward, or tilt it forward.

**Height adjustment**

The height of the seat can be adjusted using the handle located under the seat



SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows you to avoid undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. In case of a fall, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the device unsupervised when children or persons without sufficient knowledge of the use of the device are in its vicinity.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then handed over to collection points for waste electronic and electrical equipment

electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

STORAGE AND TRANSPORT

The device should be transported at temperatures in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.