

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Portable milling machine aku VIVA 305



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland

www.activeshop.com.pl

Rev. A/08/2024



Technical data

Rated voltage	5V 2A
Output voltage	7.4V 3A
Power	36W
Rotational speed	35,000 RPM

Dimensions




Note

1. Clean the device periodically to prevent the accumulation of dirt, dust and other undesirable substances. Accumulation of the above, may lead to malfunction of the device or even damage to the equipment.
2. It is not allowed to wrap the power cord around the device, this may cause the cord to malfunction.
3. Always make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly inserted into the outlet. Failure to do so may result in fire, electric shock or burns
4. The cable must not be modified, stretched, excessively bent or twisted.
5. Nothing heavy may be placed on the cord.
6. Prevent dust or other harmful elements from getting into the plug, base or head by using dust absorbers.

7. Do not hit or throw the device. If the device is damaged due to impact or falling, you cannot continue using it.
8. Do not attempt to disassemble or repair the equipment. For repair, contact the distributor, from whom the equipment was purchased or an authorized service center.

Construction of the device

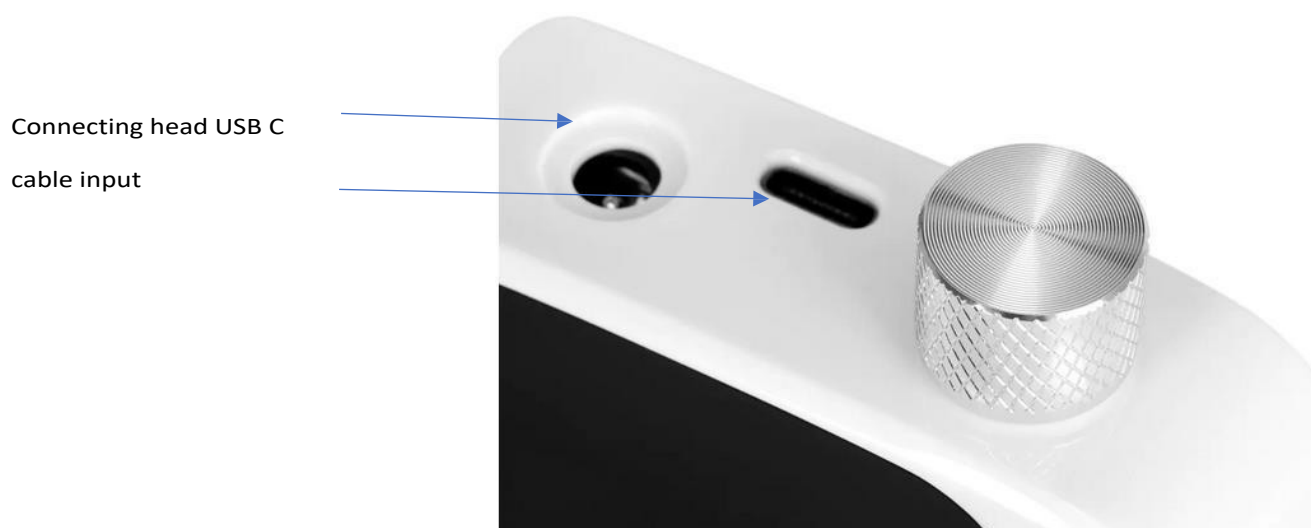

Operating Instructions:

1. Make sure the cutter is properly placed and locked in place. The head has a twist-lock system so you can easily install and remove the cutter.
2. Start the machine with the Start/Stop button.
3. Use the knob to adjust the speed of rotation (RPM) by turning the knob left or right.
4. You can select the direction of rotation by pressing the button.
5. When finished, reduce the RPM to the minimum and turn off the device.
6. The device has a 200 mAh battery, which allows for 8-10h of operation on a single charge. If necessary, plug the device into charging after finishing.

Changing the cutter

1. To replace the cutter, turn the Twist Lock knob counterclockwise towards the open padlock sign.
2. At this point, you can replace the cutter by sliding it out of the spindle and replacing it with a new one.
3. Once the cutter is in the spindle, turn the Twist Lock knob to the right, in the direction of the sign of the closed padlock" until you hear the characteristic "click".
4. The desired speed of the cutter depends on the type and material of the cutter. In this regard, refer to the information provided by the manufacturer.

Note

An Er1 error may appear on the screen if the cutter is improperly inserted or not locked.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Handling the device only by qualified personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or use it for any purpose other than that indicated in this manual. Any servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - to prevent any liquids from getting into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP Ltd. in the following cases:
A) liquid has entered the device, b) the device emits a strange odor, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device
7. Do not put anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise otherwise there is a risk of incorrect operation of the device, its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on the use of the equipment in a safe manner so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unsupervised when children or persons without sufficient knowledge of the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store it out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be thrown into household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning used electrical appliances, used electrical appliances should be

be collected separately, and then handed over to collection points for used electrical and electronic equipment.
electronic equipment.

At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as can be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORTATION

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.