

ACTIVESHOP®

JD700 milling machine

user manual



Importer:

ACTIVESHOP Sp. z o.o.
ul. Graniczna 8b, bud. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/05/2024



Activ Powe milling machine JD700. It is characterized by high quality workmanship, small dimensions and modern design, clear and readable control panel, intuitive operation, provides an excellent opportunity to work both experienced and novice users. The head has a **TWIST-LOCK** type cutter lock, which allows you to replace the cutter with a single movement. Controlling the cutter is possible with a manual drive and a foot drive.



TECHNICAL SPECIFICATIONS:

- Power: 35 W
- Power supply: 220-230V, 50-60Hz
- Ergonomic design
- Right and left-hand rotation
- On/off switch and speed control in the power supply/base
- Infinitely adjustable rotation from 0-30k.
- TWIST-LOCK handle (cutter replacement in one motion)
- Warranty 12 months
- Comes in three colors: white, black, purple


NOTE!!!

This equipment can be used by children at least 8 years of age and by people with reduced physical and mental capabilities, and those with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on the use of the equipment in a safe manner so that the associated risks are understood. Unsupervised children should not perform cleaning and maintenance of the equipment.

MILLING MACHINE INSTALLATION:

1. Make sure the milling machine is not plugged in
2. Connect the cutter head to the selected milling machine
3. To replace the cutter, make sure the head is not running
4. Then turn the clamp to the left until you hear the characteristic "click" sound
5. Slide the desired cutter into the head
6. To close the jaws, simply turn the clamp clockwise until the characteristic "click" sound mentioned earlier

Note!!! To remove the cutter, follow the same changing the cutter

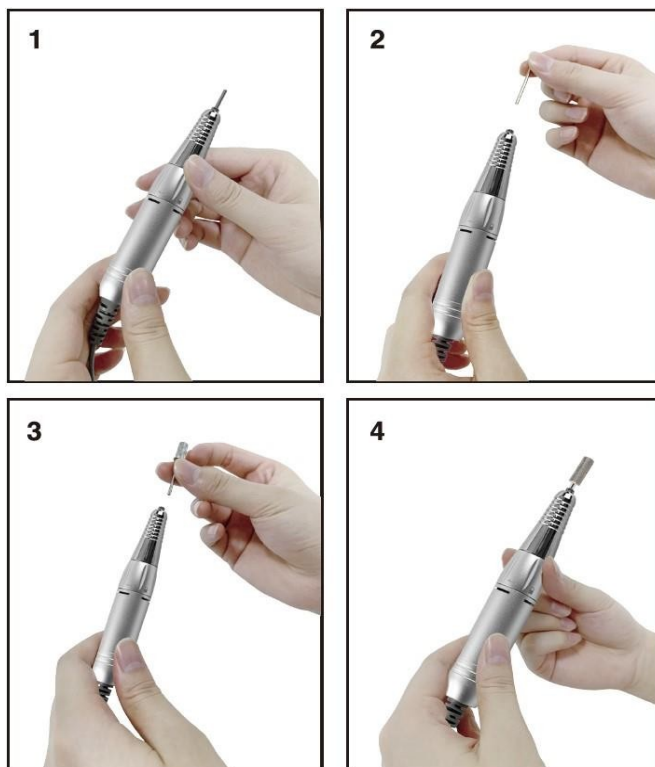

CAUTION!!!

Do not start the motor of the milling machine when the cutter holder is in the open position and when there is no cutter in the head (this risks damaging or burning out the device). Remember, there should always be a cutter or an attached blanking pin in the cutter head holder after finishing work.

MILLING MACHINE INSTALLATION:

1. Install the unit in a work area that is not too humid, hot or dirty
2. The head cable plug must be connected to the front of the machine
3. Install the appropriate cutter according to the steps in the cutter installation instructions
4. After changing the cutter, make sure that the jaws of the head with the cutter are definitely closed
5. Connect the plug to the contact, then turn on the cutter
6. After finishing work and cleaning the cutter, we recommend that the cutter is always inserted into the handle (cutter head)
7. After finishing work, always pull the plug from the socket or cut off the power supply, reducing the speed to 0, does not mean that the cutter is off

STARTING THE MILLING MACHINE:

1. Connect the milling machine to the power supply.
2. Turn on the milling machine with the corresponding button.

3. Select the direction of rotation (left or right).
4. To start the head, increase the rotation.

CONSERVATION:

Metal, stone and diamond cutters can be sterilized in a sterilizer. Felt cutters and brushes should be cleaned with disinfectant liquid.

RECOMMENDATIONS

1. Remember never to drop the cutter or head, this will damage the ball bearings, which will affect the life of the motor.
2. Do not allow water and other liquids to get inside the machine
3. Turn off the router each time you replace the cutter.
4. Never change the cutter while the milling machine is running, to change the cutter, turn off the milling machine
5. Connect the milling machine to an outlet only after making sure that all wires are installed correctly and safely.
6. We recommend the device only for use by professionals
7. The plug of the foot control switch cable must be well connected to the back of the machine body
8. Make sure that the cutter you want to use was not bent, asymmetrical or damaged. Always use standard cutters

NOTE!!!

Unlocking the handle during operation will damage the machine. Replacing cutters while the engine is running will damage the clutch. This damage is not subject to warranty. The cutter should be replaced in the open position of the chuck (unlocked) and the milling machine must be turned off at this time.

BASIC PROBLEMS AND SOLUTIONS:

The milling machine does not turn on.

- check if it is connected to electricity - connect the milling machine to electricity.
- check if the milling machine is turned on - turn the milling machine on with the switch.
- check if the hand-leg switch is set to the "Hand" position.
- check if the head cable is not damaged - replace the head cable (available at Activeshop).
- check if the power cord is not damaged - contact Activeshop service.
- check if the voltage change button is set to 220V. If not, and the milling machine is plugged in, the milling machine is damaged - contact Activ service for repair against payment.

The head is overheating.

- Check if the Twist-Lock is properly closed.

CAUTION!!!

Do not soak the heads. Do not disinfect with excessive amounts of liquid. Water or disinfectant liquid getting inside the head, may damage it. Before possible disinfection, remove dust from the head. It is recommended to maintain the head with agents designed for this purpose.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows you to avoid undesirable consequences during the procedure.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP L t d . company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
 - A. liquid has entered the device,
 - B. the device emits a strange odor, smoke or makes strange sounds,
 - C. the power cord has been damaged,
 - D. The device has been knocked over or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.

7. Do not insert anything into the opening of the device. In case a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center, this will avoid danger.
2. This appliance can be used by children at least 8 years of age and by people with reduced physical and mental abilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning used electrical and electronic equipment, used electrical equipment should be

collect separately, and then forward to collection points collection of used electronic equipment and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-)20°C to (+)40°C only in its original packaging. Store the device in a well-ventilated room and a relative humidity of no more than 90%. Operating temperature from (+)10°C to (+)40°C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.