

ACTIVESHOP[®]

USER MANUAL

VIVA 602 S Milling Machine



Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., Bldg.
DC2A 54-610 Wrocław,
Poland_
www.activeshop.com.pl
Rev. A/08/2024



Technical Specifications

Rated voltage	12V 2A
Output voltage	12V 2A
Power	36W
Rotational speed	45,000 RPM

Dimensions




Note

1. Clean the device periodically to prevent the accumulation of dirt, dust, and other unwanted substances. Accumulation of these substances may lead to malfunction or even damage to the equipment.
2. Do not wrap the power cord around the device; this may cause the cord to malfunction.
3. Always ensure that the device is powered by a source with the correct rated voltage. Make sure the plug is properly inserted into the outlet. Failure to do so may result in fire, electric shock, or burns.
4. Do not modify, stretch, bend excessively, or twist the cord.
5. Do not place anything heavy on the cord.
6. Prevent dust or other harmful particles from entering the plug, base, or head by using dust collectors.
7. Do not strike or throw the device. If the device is damaged as a result of an impact or a fall, do not continue to use it.
8. Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center.

Device Design

Rotation direction icon Battery icon

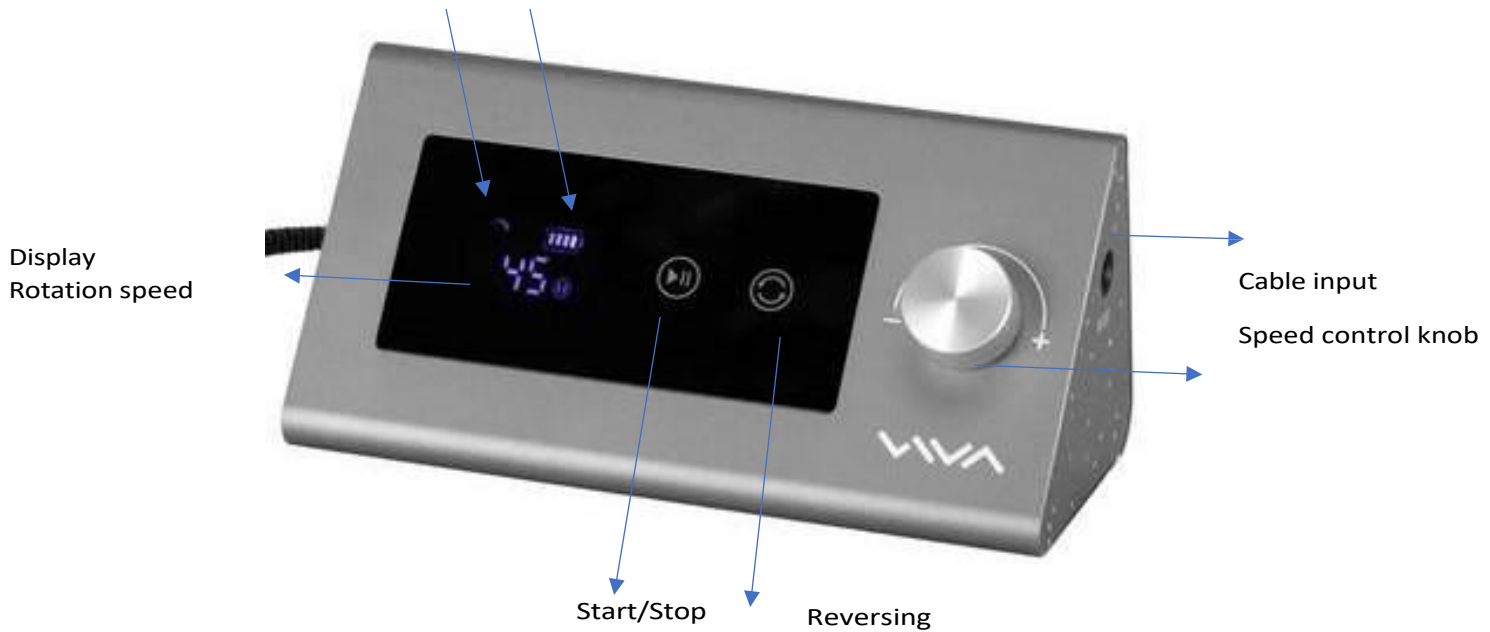

Instructions:

1. Make sure the cutter is properly positioned and locked in place. The head features a twist-lock system, making it easy to install and remove the cutter.
2. Plug the device into an electrical outlet, then turn it on using the Start/Stop button.
3. Use the dial to adjust the speed (RPM) by turning it left or right.



4. You can select the rotation direction by pressing the button
5. When you're done, reduce the speed to minimum, turn off the device, and unplug it.

Replacing the Cutter

1. To replace the cutter, turn the Twist Lock knob counterclockwise, toward the open padlock symbol.
2. At this point, you can remove the cutter from the spindle and replace it with a new one.
3. After placing the cutter in the spindle, turn the Twist Lock knob clockwise, toward the closed padlock symbol, until you hear a distinct "click."
4. The desired cutter speed depends on the type and material of the cutter. In this regard, please refer to the information provided by the manufacturer.

Note

The screen may display error code Er1 if the cutter is not properly seated or is not locked in place.

SAFETY PRECAUTIONS

1. This device is professional equipment intended for use in beauty salons. Operation by qualified personnel only helps prevent adverse effects during treatment.
2. Do not disassemble the device or use it for any purpose other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).

3. Do not install or operate the device near liquids, in wet areas, or with wet hands—to prevent any liquids from entering the device.
4. Immediately unplug the device from the outlet and contact the authorized service provider, ACTIVESHOP Sp. z o.o., in the following cases:
 - A) Liquid has entered the device, b) the device emits a strange odor, smoke, or unusual noises, c) the power cord is damaged, d) the device has been knocked over or its casing is damaged.
5. Do not place objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet every time you finish using the device
7. Do not insert anything into the opening in the device. If a foreign object enters the opening, unplug the power cord and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off, and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, becoming damaged, or even catching fire.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent hazards.
2. This device may be used by children aged 8 years and older and by persons with reduced physical or mental capabilities or lack of experience and knowledge of the equipment, provided that supervision or instruction regarding the safe use of the equipment is provided so that the associated risks are understood.
3. The device is not intended for use by children. Do not allow children to play with the device.
4. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
5. This electrical device is not a toy. Improper use of or contact with this electrical device may pose a risk of injury or death; therefore, keep it out of the reach of children.

DISPOSAL OF THE DEVICE



Used electrical devices, accessories, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical devices should not be disposed of in household waste bins. Follow the regulations regarding the disposal of this type of equipment. To protect the environment in accordance with Directive 2012/19/EC on waste electrical equipment, waste electrical equipment should

collected separately and then taken to collection points for waste electrical and electronic equipment.

At the end of their useful life, as well as old devices containing valuable recyclable components, they should be sent for recycling. Therefore, they should be taken to appropriate collection points, or they can be sent to ACTIVESHOP Sp. z o.o.

STORAGE AND TRANSPORT

The device should be transported at temperatures ranging from (–) 20 °C to (+) 50 °C exclusively in its original packaging. Store the device in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature: from (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, or expose it to mechanical shocks or weather conditions.