

ACTIVESHOP[®]

User Manual

Germix Single UV-C Sterilizer HQ YM9001A



Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., Bldg.
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/04/2026



The Germix sterilizer is a safe way to achieve safe and effective disinfection without the use of or high temperatures. The device operates based on the bactericidal effect of UV radiation—ultraviolet light with a wavelength of 100–280 nm, particularly 254 nm (UV-C)—which, when directed directly at surface, effectively destroys living forms of microorganisms. It allows for efficient dry disinfection, during which the equipment is not exposed to mechanical damage or dulling. It perfectly cleans the surfaces of tools such as scissors, combs, brushes, clippers, tweezers, or razor blades.

Technical data	
Power	220W
Voltage	220-240V 50Hz
Sterilization time	30–45 min

Application

1. The UV sterilizer is used to disinfect tools made of metal, plastic, wood, and composite materials (scissors, combs, tweezers, etc.)
2. Disinfection is performed using UV rays, ensuring that the equipment is not exposed to mechanical damage. UV sterilization involves exposing the material to ultraviolet radiation.
3. This radiation alters the structure of nucleic acids, which is why it is most effective against vegetative forms of microorganisms.
4. The device is ideal for use in beauty salons, spas, aesthetic medicine clinics, and hair salons.

Instructions for use

1. Place the device on a stable surface, then insert the instruments and close the UV sterilizer.
The instruments placed in the sterilizer drawer should be clean, dry, and pre-washed. They should also not overlap.
2. Plug the sterilizer into an electrical outlet. Turn on the device using the on/off switch.
3. The sterilization time is approximately 30–45 minutes.
4. Once the desired time has elapsed, turn off the sterilizer using the on/off switch.
5. Open the sterilizer and remove the items (this is not mandatory—you can also leave them in the container).
6. The instruments are ready for use.

Important

1. The sterilizer lid must always be closed when the unit is turned on.
2. Do not open the device until the sterilization process is complete and the LED lights have turned off.
3. Do not allow contact with water or corrosive chemicals.
4. Complex components should be opened as wide as possible and disassembled to ensure that the sterilization of the instruments is carried out as effectively as possible.


Recommendations

1. Make sure you have placed the device on a flat, stable surface to reduce the risk of it falling and becoming damaged.
2. Never leave the device plugged in and unattended.
3. Use the device in accordance with the intended use described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the appliance if it is not working properly or if it has been dropped, damaged, or has come into contact

into water.

6. Do not pull directly on the cord to remove the plug from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Dimensions

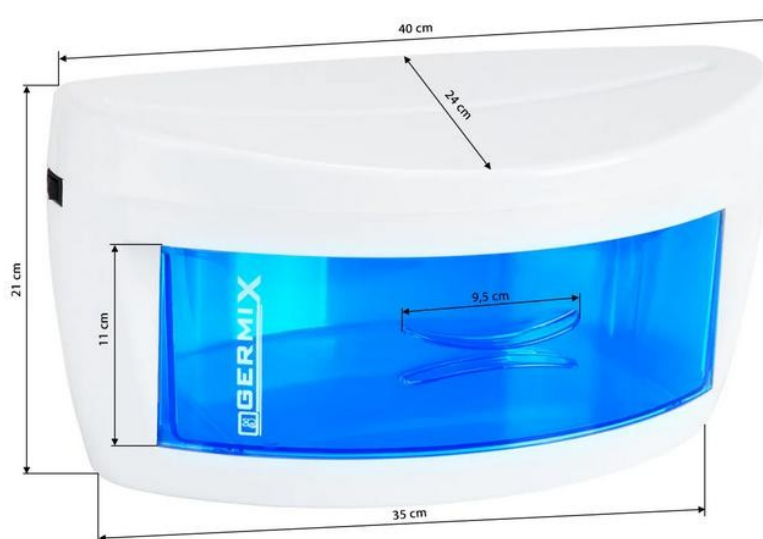

Safety precautions

1. This device is professional equipment intended for use in beauty salons. To avoid adverse effects during treatment, the device must be operated exclusively by qualified beauty professionals.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device and contact the authorized service provider, ACTIVESHOP Sp. z o.o., in the following cases: a) liquid has entered the device, b) the device emits a strange odor, smoke, or unusual noises, c) the power cord is damaged, d) the device has been knocked over or its casing is damaged.
5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.

9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent hazards.
2. This device may be used by children aged 8 years and older, by persons by persons with reduced physical or mental capabilities, as well as by those unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on how to use it safely and understand the associated risks.
3. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
4. The device is not intended for use by children. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used electrical equipment must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (-20°C) to $(+40^{\circ}\text{C})$ exclusively in its original packaging. It should be stored in a well-ventilated room with relative humidity not exceeding 90%. Operating temperature range: $(+10^{\circ}\text{C})$ to $(+40^{\circ}\text{C})$. During processes During storage and transport, do not throw or drop the device, or expose it to mechanical shocks or weather conditions.