

# ACTIVESHOP®

## INSTRUCTIONS FOR USE

Lamp UV for nails GLOW

YC-57



Importer:  
ACTIVESHOP Sp. z  
o.o.  
8b Graniczna St., building  
DC2A 54-610 Wrocław,  
Poland  
[www.activeshop.com.pl](http://www.activeshop.com.pl)  
Rev. A/04/2024



## TECHNICAL DATA:

|                  |                       |
|------------------|-----------------------|
| Model            | FD-413                |
| Rated voltage    | 220 - 240V/50 Hz      |
| Electrical power | 268 W                 |
| Input voltage    | 24 V                  |
| Number of LEDs   | 57                    |
| Dimensions       | 232mm x 93mm x 192 mm |

## NOTES

1. Carefully read the instruction manual before using the lamp for the first time.
2. Do not look directly at the LED light, as it may damage your eyesight.
3. Do not use the lamp if the power supply is damaged.
4. Exposure for too long can cause skin damage.
5. Use products designed for LED light curing.
6. Remember to unplug the device from the contact when you are done using it.
7. Keep the device away from children.

## HOW TO USE

1. Connect the power adapter to the lamp.
2. Select the appropriate mode for the device to start working.
3. There are 4 buttons on the device 10s,30s,60s, 99s (Low heat mode).
4. In "low heat mode", the power is increased gradually to minimize the discomfort caused during the curing of the varnish.
4. The lamp will operate at full power in 10s, 30s and 60s mode.
5. If the user does not turn on any mode, when he puts his hand into the lamp, the sensor will start the lamp. The maximum operating time is 120 seconds.

## SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP SP. Z O.O. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP SP. Z O.O. in the following cases:
  - a) liquid has entered the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.

6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

#### **CAUTION:**

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

#### **DISPOSAL OF THE DEVICE**



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning waste used electrical and electronic equipment used electrical

electrical equipment should be collected separately, and then handed over to collection points for used electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

#### **STORAGE AND TRANSPORT**

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

