

ACTIVESHOP[®]

USER MANUAL

Sillon Lux 273b Electric Beauty Chair with 3 Motors
CH-273E/ 132718



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/05/2026



Scan for
different
languages



Thank you for choosing our product.
Please read the user manual before first use and keep it for future reference.

The Lux 273B electric beauty chair is equipped with 3 actuators controlled by a wired remote. Ease of use and customization to individual needs significantly facilitate the performance of a variety of treatments. Its distinctive, elegant finish, combined with its simplicity, makes this chair an attractive addition to any professional salon.

Technical specifications	
Input voltage	~230 V
Power consumption	150 W
Rated frequency	50 Hz
Upholstery material	Synthetic leather
Control	Wired remote control
Maximum load	140 kg

Chair construction

1. Headrest
2. Opening in the headrest
3. Backrest
4. Armrest
5. Seat
6. Footrest
7. Wired remote control
8. Plastic cover



 
Installation

1. Install the headrest as shown in the photo below.




2. Install the armrests—fold the seatback to the reclined (horizontal) position, then screw the armrest into place as shown in the photos.

Step 1

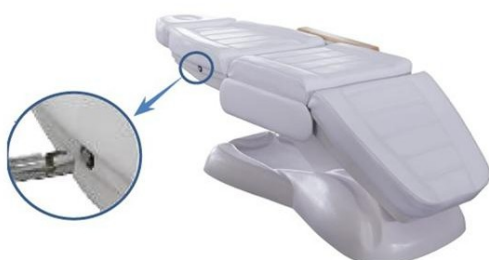

 Step 2

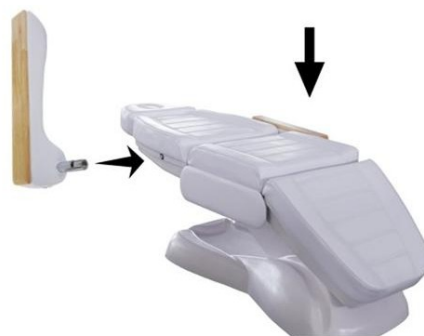

Step 3



Step 4



3. Connect the power cord to the power source.

Remote control functions

To set the chair to the desired position, hold down the corresponding button on the remote control:



← Backrest angle adjustment

← Footrest angle adjustment

← Seat height adjustment (65–82 cm)

 
For added convenience, the remote control can be hung on the metal hook located on the right side of the seat, so it is always within reach.



Chair adjustment functions:

- The design allows the chair to be reclined into a lying position.
- A practical opening in the headrest, discreetly hidden under the cushion.
- Movable armrests with a 180° range of motion.
- Extendable headrest

Device dimensions

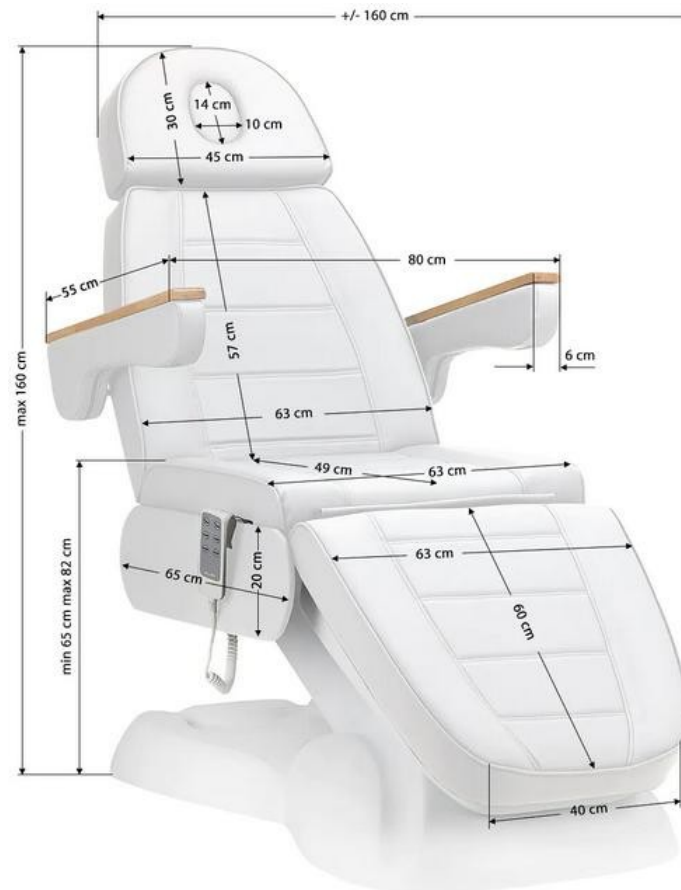

When fully reclined (flat), the chair reaches a length of 207 cm.

Note

Maximum seat weight capacity: 140 kg.

Do not exceed the maximum weight capacity of the chair or sit on the armrests.

Cleaning and maintenance

To keep the chair in good working order, ensure its long service life, and proper operation of the device, we recommend regular maintenance and adherence to the following cleaning guidelines.

Note: Before performing any work, always turn off the device using the main switch and unplug it from the outlet

- Cleaning synthetic leather surfaces:
Wipe the leather with a soft, dry, or slightly damp cloth. Do not use strong detergents such as

solvents, gasoline, and alcohol-based products. You may use commercially available synthetic leather care products and follow the instructions on their packaging.

Allow the chair upholstery to dry naturally. Do not use blow-dryers to dry the surface. Do not use denim or colored fabrics to wipe the device, as their dye may transfer to the chair's surface.

- **Cleaning metal and plastic surfaces**
Wipe the surfaces with a soft, dry, or slightly damp cloth. A small brush works well for cleaning hard-to-reach areas or corners. Do not use too much cleaning solution on the device. Then disinfect the device with an appropriate solution.
- **Stainless steel surfaces**
A mild detergent solution works best. Ammonia and most solvents can be used to remove stubborn stains. Avoid chlorine-based solutions.
- **Painted or chrome-plated metal surfaces**
 - Do not use water jets for cleaning.
 - Do not clean in high temperatures or high humidity. Do not expose the device to conditions that could lead to liquid contamination.
 - Do not use solvents or acids for cleaning.

If any part of the chair is damaged, turn off the device, unplug the power cord from the outlet, and notify an authorized service center of the malfunction.

Recommendations

1. Make sure you have installed the device on a flat, stable surface to reduce the risk of it falling and being damaged.
2. Never leave the device plugged in and unattended.
3. Use the device as intended, as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or has come into contact with water.
6. Do not pull directly on the cord to remove the plug from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions

1. This device is professional equipment intended for use in beauty salons. Operation of the device exclusively by qualified beauty professionals helps prevent adverse effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device and contact the authorized service provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device, b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not place any objects on the cables. Do not install the device in locations

where someone might step on the power cord.

6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent hazards.
2. This device may be used by children aged 8 years and older, by persons with reduced physical or mental capabilities, as well as by persons unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction regarding the correct and safe use of the device and understand the associated risks.
3. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
4. The device is not intended for use by children. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical devices must be collected separately and taken to collection points for waste electronic and electrical equipment. Follow the rules for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (-20°C) to $(+40^{\circ}\text{C})$ exclusively in its original packaging. Store it in a well-ventilated room with relative humidity not exceeding 90%. Operating temperature range: $(+10^{\circ}\text{C})$ to $(+40^{\circ}\text{C})$. During storage and transport, the device must not be thrown or dropped, nor exposed to mechanical shocks or weather conditions.