

ACTIVESHOP®

USER MANUAL

Azzurro Special 152 beauty chair



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, bud. DC2A 54-610
Wrocław, Poland
www.activeshop.com.pl
Rev. A/02/2026

READ THE USER MANUAL BEFORE USING THE PRODUCT


This manual contains detailed information on the operation and maintenance of the device. Read the enclosed manual before using the device. Use the device as described. Keep this manual and ensure that all persons who may use the device are familiar with it.

Technical data:

Dimensions: 119 x 60 x 53 cm
Weight: 14 kg
Maximum load: 150 kg Height
adjustment: 55 - 75 cm Backrest
adjustment front-back: 0 - 5 cm Angle
adjustment: 10°

Construction:

1. Chair backrest and seat
2. Gas spring
3. Chair base
4. Casters

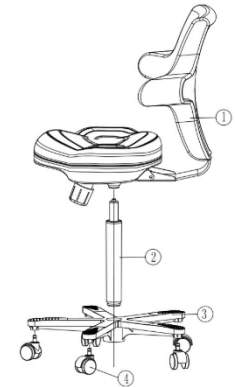

Assembly:

1. In some models, the backrest and seat of the chair are not assembled together. In this case, slide the backrest into the seat mounting and tighten with the 3 screws provided.
2. Attach the casters to the base by pressing them in.
3. Insert the thicker side of the actuator into the base.
4. Place the seat on the actuator.

Note: In some models, the actuator is protected by a plastic cover. (at the point of connection with the seat). Before attaching the seat, check that the plastic cover has been removed. Otherwise, it will not be possible to change the vertical position after assembly.

Operation:

Vertical adjustment:


To lower the seat, press the lever marked in the picture while sitting on the seat or otherwise weighing it down.

To raise the seat, press the lever marked in the picture without applying weight to the seat.




Backrest tilt adjustment:

Push the end of the lever outwards to unlock the tilt adjustment. Press the backrest and set it to the desired position. Then push the lever tip in to lock the backrest position. Please note that due to the type of locking mechanism used locking mechanism, in order to move the backrest closer to the seat, you must first push it in the opposite direction (as indicated by the arrow in illustration).

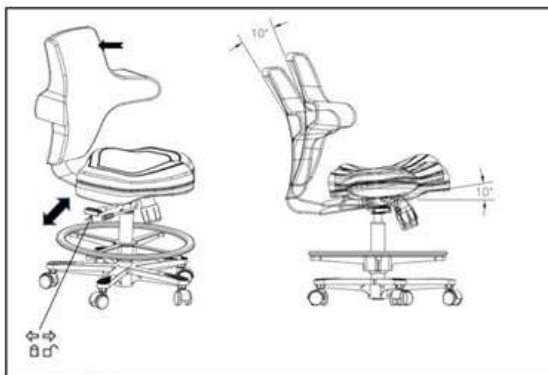

Horizontal seat adjustment:

To move the seat forward or backward, lift the marked in and then move the seat to the desired position. When you release the lever, the seat will remain in the selected position.

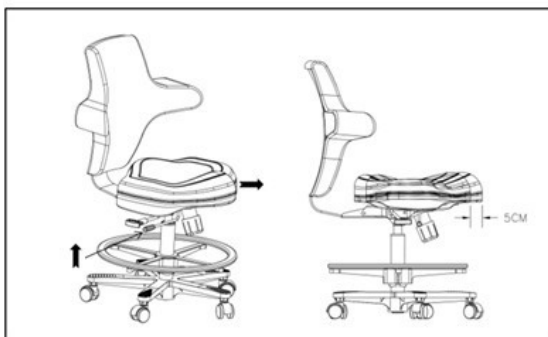

Recommendations:

1. Do not exceed the recommended load capacity of the chair, as exceeding the recommended weight may cause permanent damage (max. 150 kg).
2. Do not use products containing corrosive agents and dyes, as well as oily cleaning agents to clean the chair.
3. Unsuitable cleaning agents may cause damage to the material, corrosion, or other problems.
4. Clean the seat regularly to prevent dirt from becoming permanently embedded. If the upholstery becomes dirty, it is safest to use lukewarm water and soap.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (–) 20 °C and (+) 50 °C, exclusively in its original packaging. Store the device in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature range: (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, expose it to mechanical shocks or atmospheric factors.

SAFETY MEASURES

1. The device is professional equipment for use in beauty salons. The device should only be operated by qualified beauty salon staff to avoid undesirable effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this user manual. All service and repair work must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, wet areas, or with wet hands, so that no liquids can get into the device.
4. Immediately unplug the device and contact an authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases:
 - a) liquid has entered the device, b) the device emits a strange odor, smoke, or strange noises, c) the power cord has been damaged, d) the device has been knocked over or its casing has been damaged.
5. Do not place any objects on the cables. Do not install the device in places where someone could step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not insert anything into the opening in the device. If a foreign object gets into the opening, unplug the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
9. In order to guarantee the specified service life of the device, it is recommended to wait one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of the device malfunctioning, becoming damaged, or even burning out.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center to avoid danger.
2. This device can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they are supervised or have been given instruction on how to use the device safely and understand the hazards involved.
3. The device is not intended for use by children. Children must not be allowed to play with the device.
4. Do not leave the device unattended when children or persons who do not have sufficient knowledge of how to use the device are in its vicinity.
5. This electrical device is not a toy. Incorrect use or contact with the electrical device may pose a health risk or lead to death, so the device must be used and stored out of the reach of children.

DISPOSAL OF THE DEVICE



Used electrical appliances, equipment, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical appliances should not be disposed of in household waste containers. Follow the rules regarding disposal of this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used electrical equipment must be collected separately and then transferred to collection points for waste electrical and electronic equipment. At the end of their useful life, old devices contain valuable recyclable components, so they should be sent for recycling. Therefore, they should be taken to appropriate collection points, or they can also be sent to ACTIVESHOP Sp. z o.o.