

ACTIVESHOP[®]

Operating Instructions Sprint 48 milling machine



Importer:


ACTIVESHOP Sp. z o.o.
ul. Graniczna 8b, bud.
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/05/2024



Professional milling machine Sprint 48, is characterized by high quality workmanship, small dimensions and modern design. Clear and easy-to-read control panel, intuitive operation, creates an excellent working opportunity for both experienced and novice users. The head of the milling machine reaches a speed range from 0 to 30,000.

The head has a **TWIST-LOCK** type cutter lock, which allows you to replace the cutter with a single movement.

NOTE: Changing the voltage to 110V will cause permanent and irreparable damage to the device.

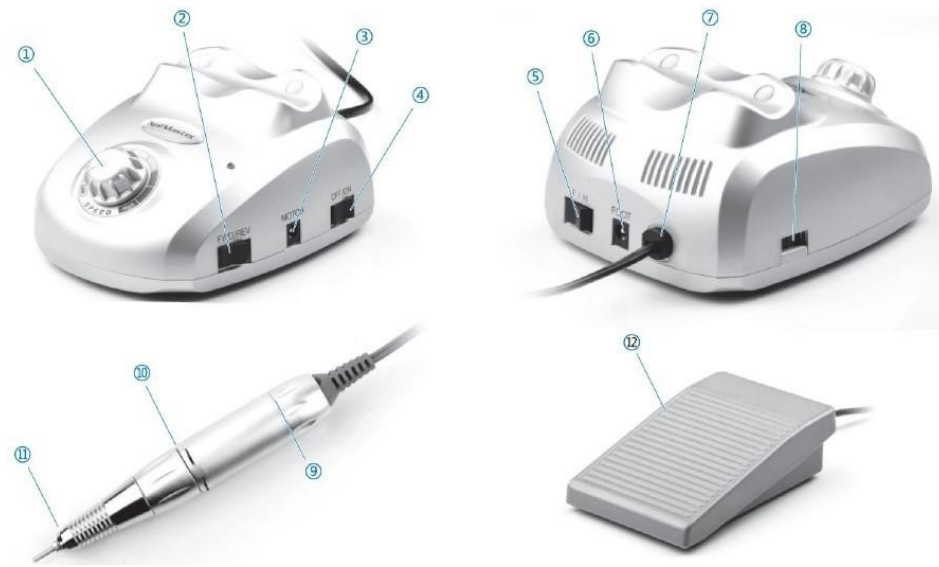

SPECIFICATIONS:

1. RPM adjustment knob
2. Rotation switch: right and left
3. Head connection socket
4. On/off switch
5. Foot control/manual switch
6. Foot control connection socket
7. Power cable
8. Voltage changeover switch 110/220V
9. Milling machine head
10. TWIST-LOCK switch
11. Safety pin for the socket of the cutter
12. Foot drive

CAUTION!!!

Unlocking the handle during operation will damage the machine. Changing cutters while the engine is running will damage the clutch. This damage is not subject to warranty. The cutter should be replaced in the open position of the handle (unlocked) and at this time the milling machine must be turned off.

MILLING MACHINE OPERATION:

1. Plug the appropriate adapter into an electrical outlet to charge the milling machine
2. Connect the head to the socket with three cores
3. Change the cutter:

A. Hold the head in your hand to open the jaws of the cutter, turn the movable ring clockwise to until you hear a "click" and the pointer will be over the open padlock.

B. Remove the test rod

C. Then insert cutter, which you need

D. As in the first step, to close the jaws of the milling machine, turn the movable ring counterclockwise until you hear a "click" and the indicator is over the closed padlock.

4. Turn on the milling machine, then use the start/pause button sequentially set the speed of the milling machine
5. Change the direction of rotation - forward/reverse



NOTE!!!

Do not soak the heads. Do not disinfect with excessive amounts of liquid. Water or disinfectant liquid getting inside the head, may damage it. Before possible disinfection, remove dust from the head. It is recommended to maintain the head with agents designed for this purpose.

CAUTION!

The head should be cleaned and protected from dust.

Due to poor use and damage to the head due to dust, complaints will not be accepted.

NOTE!!!

The opening mechanism of the jaws, may put more resistance when the cutter is not in the chuck. This is normal and is due to the design of the head.



TECHNICAL DATA:

1. Power supply: 220-240V, 50-60Hz
2. Ergonomic housing
3. Right and left-hand rotation
4. On/off switch and speed control on the base
5. Infinitely adjustable speed of rotation
6. Twist-lock handle (replace cutter with one movement)
7. Cutter diameter 2.32 mm
8. Power indicator: 35W
9. Base weight: 780g
10. Head weight: 160g
11. Milling machine available in colors: white, black and silver

MODEL	DIMENSIONS IN mm		
	Width	Length	Height
Sprint 48	150 mm	110 mm	70 mm

Basic problems and solution:

The milling machine does not turn on.

- check if it is connected to electricity - connect the milling machine to electricity.
- check if the milling machine is turned on - turn on the milling machine with the switch (No. 9 on the diagram)
- check if the head cable is not damaged - replace the head cable (available at Activeshop)
- check if the power cable is not damaged - contact Activeshop service.

The head is overheating.

- check if Twist-Lock is properly closed

NOTE!!!

Change the cutter after turning off the milling machine with the switch (No. 9 in the diagram). Reducing the speed (No. 4 in the diagram) to the minimum does not turn off the milling machine, but only reduces its speed to the minimum (invisible to the naked eye). Changing the cutter on the switched-on milling machine at the minimum rpm may cause overheating of the head, and consequently damage (not covered by the warranty).

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows you to avoid undesirable consequences during the procedure.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
 - a) liquid has entered the device,
 - b) the device emits a strange odor, smoke or makes strange sounds,
 - c) the power cord has been damaged,
 - d) the device has been overturned or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise there is a risk of incorrect operation of the device its damage or even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This appliance can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment.

In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then transferred to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20°C to (+) 50°C only in its original packaging. Store the device in a well-ventilated room and a relative humidity of no more than 75%. Operating temperature from (+) 10°C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.