

ACTIVESHOP[®]

Instructions for use

Momo P10 pro dust collector



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, bud.
DC2A 54-610 Wrocław,
Poland_
www.activeshop.com.pl
Rev. A/07/2025



Scan for
different
language
s



Technical data:

 
Power: 48 W

Speed: 3500 rpm Airflow speed: 3.23

m/s Dimensions: 219 × 207 × 57 mm

Power supply: 12.6 V / 0.95 A

Construction:

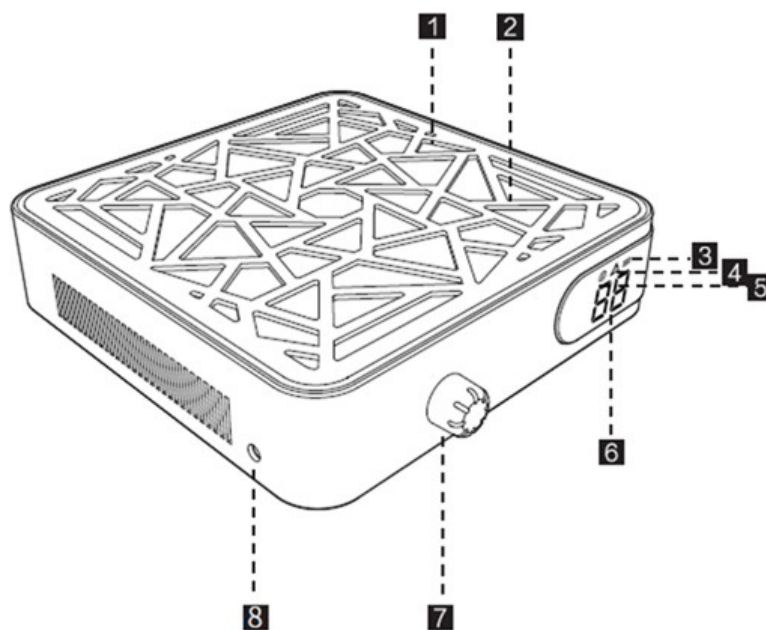

1. Cover

2. Filter

3. Air flow indicator

4. Battery level indicator

5. Error indicator

6. Pause indicator

7. Power and speed switch

 
 
8. Power socket

Usage:

- Open the cover and insert the filter.
- Turn on the power switch—you will hear a beep when it is turned on.
- When the device is started, the default mode "00" is displayed – the device is not working. To increase the air flow, turn the knob clockwise. To decrease it, turn the knob counterclockwise. Turn the knob until you hear a click – the device will then turn off.
- Pressing the knob briefly will pause the device – you will hear a "click" and the pause indicator will light up. Pressing the knob again briefly will resume operation – the pause indicator will turn off and the device will restart.
- When the battery is low, the power indicator will flash – recharge the device.
- When the device is turned on and the filter is removed or incorrectly installed, the error indicator will flash and the device will emit a continuous sound.

Filter paper

- Before starting to style your nails, place the filter paper on the top of the device (on the grille).
- The paper collects dust and debris generated during operation, protecting the interior of the device.
- When removing hybrid polish or gel, the filter should be placed over the paper to help effectively capture particles.
- After finishing work, remove the filter and dispose of the used paper.

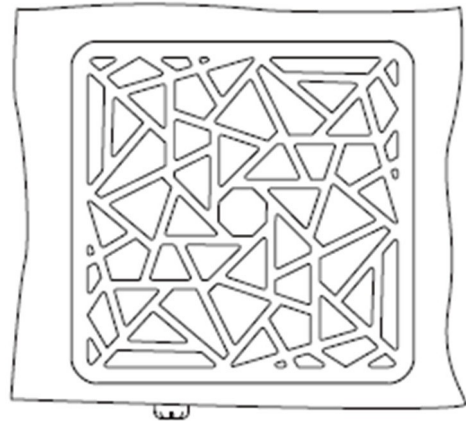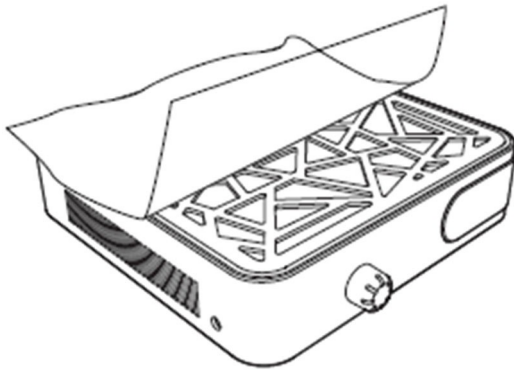

Note!

- The absorbent bags are disposable. When the bag is full, the pores become clogged, which reduces air flow and causes the absorbent to stop working. In such circumstances, the fans are also subjected to excessive load, which may cause the device to fail.
- The device should be cleaned periodically to prevent the accumulation of dirt, dust, and other unwanted substances. The accumulation of these substances can lead to malfunctioning of the device or even damage to the equipment.

Cleaning and maintenance:

- The absorber housing is best cleaned with a damp cloth or mild disinfectant.
- Do not clean the device directly under water.
- Do not use abrasive, highly corrosive agents, pastes, acetone, solvents, or alcohol-based products to clean the absorber.
- Dust deposited on the fans should be cleaned with a small brush from the side of the cover and from the side of the filter. After removing the dust with a brush, it is recommended to use compressed air to thoroughly remove any dust residue.
- The device should be cleaned when it is turned off and disconnected from the power supply.

Warning!

- If a power supply with a voltage other than 12V is used, the absorber will not work properly or may be damaged.
- If the absorber does not turn on or operates intermittently (the fan starts and stops), make sure that the power supply voltage is correct.

SAFETY PRECAUTIONS

1. The device is professional equipment for use in beauty salons. The device should only be operated by qualified beauty salon staff to avoid undesirable effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this user manual. All service and repair work must be performed exclusively by an authorized service technician (Activeshop sp. z o.o.).
3. Do not install or operate the device near liquids, wet areas, or with wet hands, so that no liquids can get into the device.
4. Immediately unplug the device and contact an authorized service center provided by Activeshop sp. z o.o. in the following cases: a) liquid has entered the device, b) the device emits a strange odor, smoke, or strange noises, c) the power cord has been damaged, d) the device has been knocked over or its casing has been damaged.
5. Do not place any objects on the cables. Do not install the device in places where someone could step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not insert anything into the opening in the device. If a foreign object gets into the opening, unplug the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
9. To ensure the specified service life of the device, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications on the rating plate. Otherwise, there is a risk of incorrect operation, damage, or even burning of the device.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center to avoid danger.
2. This device can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they are supervised or instructed in the safe use of the device so that the associated risks are understood.
3. The device is not intended for use by children. Children must not be allowed to play with the device.
4. Do not leave the device unattended when children or persons who do not have sufficient knowledge of how to use the device are in its vicinity.
5. This electrical device is not a toy. Incorrect use or contact with the electrical device may pose a health risk or lead to death, so the device must be used and stored out of the reach of children.



DISPOSAL OF THE DEVICE

Used electrical appliances, equipment, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical appliances should not be disposed of in household waste containers. Follow the rules for disposing of this type of equipment. In order to protect the environment natural in accordance with Directive 2012/19/EC on waste equipment

Electrical and electronic waste Electrical appliances should be collected separately and then taken to collection points for waste electrical and electronic equipment.

At the end of their useful life, old appliances contain valuable recyclable components, so they should be sent for recycling. They should therefore be taken to the appropriate collection points, or they can also be handed over to Activeshop sp. z o.o.

STORAGE AND TRANSPORT

The device should be transported at temperatures ranging from (–) 20 °C to (+) 50 °C exclusively in its original packaging. The device should be stored in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature range: (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, expose it to mechanical shocks or atmospheric factors.