

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Sterilizer Model:

SM-360A



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland

www.activeshop.com.pl

Rev. A/10/2024



Technical data

Power	300W
Voltage	220-240V, 50Hz
Capacity	2.6L
Weight	3.1kg
Dimensions	27 x 24.5 x 17.2 cm
Working temperature	50-220°C
Operating time	10-60 minutes

CAUTION!

Remove the protective films inside the device before use! Application

1. Sterilizer is used for disinfection of instruments made of metal, plastics and composite materials (scissors, combs, tweezers, etc.).
2. Disinfection performed with high-temperature air, so tools are not exposed to mechanical damage. It kills bacteria without moisture and does not dull sharp tools.
3. The device is equipped with a temperature and time controller. So you can easily adjust the parameters needed for the treatment.

Before first use:

1. Carefully read the included instructions.
2. Remove all packaging and protective films before first use.

Instructions for use

1. Put the tools on the tray and place it in the device. Close the lid.
2. Then connect the device to electricity.
3. Use the dial to set the treatment time. Turn it to the right, selecting the desired time. A red light will illuminate, indicating that the device is in operation mode. The time will count down as per the timers. When it expires, the device will beep to signal the end of operation.
4. Then adjust the temperature by turning the knob to the right. The green lights will come on.
5. The lights will turn off when the device finishes working.
6. When finished, unplug the device from the power supply and remove the tools from inside.
7. It comes with handles - wheels that can be hooked to the side protrusions of the tray to pull it out without touching it with your hands.

Attention!

Remember to take special care, because trays, inner and outer surfaces can be very hot. Use protective gloves to avoid burns.

Do not touch a hot tray directly! Wait for it to cool down for a while to avoid burns.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places and with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP Ltd. in the following cases: a) liquid has entered the device, b) the device emits a strange smell, smoke, or makes strange sounds, c) the

the power cord has been damaged, d) the device has been knocked over, or its housing has been damaged.

5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device, its damage and even burning.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of its use are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive

2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment. At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.