

ACTIVESHOP[®]

INSTRUCTIONS USE INSTRUCTIONS

EXO MILLER
MODEL SX5(DR-2028) AND SX7(DR-2034)



Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/05/2024



Technical data

Rated voltage	100-240V
Rated frequency	50/60 Hz
Electrical power	48W
RPM	Up to 35,000 rpm

Package contents:

- Milling machine base
- Head
- Power supply
- Ceramic cutter

Note

1. The opening mechanism of the jaws, may put more resistance when the cutter is not in the chuck. This is normal and is due to the design of the head.
2. It is forbidden to use the milling machine without a suitable cutter or mandrel placed in the jaws of the head.
3. Use our products only with original accessories and parts.
4. When connecting the plug, do not touch its metal parts.
5. It is forbidden to use oil to clean the head.
6. The head must not be exposed to damage. The design of the device means that the device can be damaged if dropped or hit. If the head falls, make sure everything is functioning properly before starting the device.
7. Use cutters recommended by the manufacturer. Do not use curved cutters.
8. Use all parts carefully and gently.
9. Keep your workstation and the device clean, especially the head.
10. Use the device with safety precautions.
11. If the head, cable, plug or socket is damaged, replace the damaged component before further use.
12. When pulling the plug, do not pull on the cable.
13. Do not place the device near flammable substances.
14. Do not allow children to use the device.
15. Use a dust mask and safety goggles, and be sure to properly ventilate the room where you work.
16. When using the head at high speed, check the operation and vibration level at lower speed first.
17. When you are not using the device, unplug it from the power supply.
18. Before turning off the power, turn the potentiometer counterclockwise to the minimum position, then turn off the device by switching the Power Switch to the "o" position.
19. Do not disconnect the power plug of the Base while the device is in use.

Attention!

Unlocking the handle during operation will damage the machine. Replacing cutters while the engine is running will damage the clutch. This damage is not subject to warranty. The cutter should be replaced in the open position of the handle (unlocked) and the milling machine must be turned off at this time.

Construction of the device



1. Connect the base power supply to the power source using the power adapter
2. Connect the head to the head socket.
3. Using the twist-lock handle, open the jaws and place the cutter in the head and close the jaws.
4. Turn on the device and then use the dial to select the rotation. By turning the knob clockwise, the speed increases.

Remember:

- Always turn off the router when not in use.
- Hold the head as shown in the posted picture on the left.
- When the milling machine is not in use, place the mandrel in the head.
- Do not exceed the speed recommended by the cutter manufacturer, an example speed chart is below).

Cutter diameter RPM max

5mm	41 000
7mm	30 000
10mm	20 000
13mm	16 000
16mm	10 000



SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd . company).
3. Do not install or operate the device near liquids, wet places or with wet hands

- so that no liquids get into the device.

4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:

(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been overturned or its housing has been damaged.

5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.

6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.

7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.

8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.

9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).

10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

NOTE

1. In case of damage of power cable or other malfunctions, contact an authorized authorized service center - this will avoid danger.

2. This device can be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided, so that the associated risks are understood.

3. The equipment is not intended for play by children. Do not allow children to play with the equipment.

4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.

5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning waste used electrical and electronic used electrical equipment electrical equipment should be collected separately, and then handed over to collection points for waste electronic and electrical equipment electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

