

ACTIVESHOP[®]

USER MANUAL

Exo Syntra 35W Router

XY400 black

XY400

white



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/09/2026



Scan for
different
languages




Thank you for choosing our product.


Please read the user manual before first use and keep it for future reference.

Technical Specifications	
Power	35W
Torque	3.5 N·cm
Speed control	0–35,000 RPM/min
Input voltage	220–240 V, 50/60 Hz
Head weight	160 g
Head dimensions	13.5 cm x Ø 2.7 cm

Device description

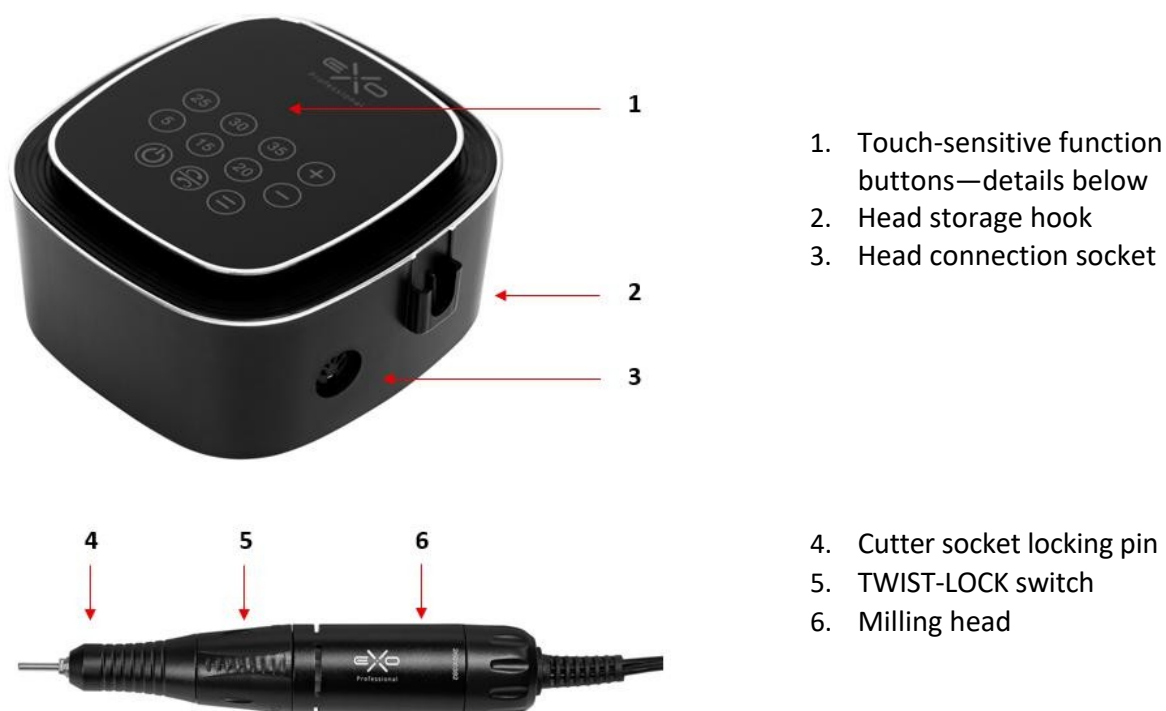

Touch-sensitive function buttons

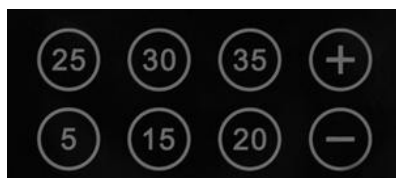

Speed control

- Selectable from 0 to 35,000 RPM per minute
- The + / - buttons allow for quick response and precise adjustment of the speed to individual needs.



Other (in order)

1. On/Off
2. Reversing
3. Pause

The drill comes with a basic set of diamond bits for cuticle care, nail plate preparation, and working with gel or acrylic. The set also includes a holder with an abrasive pad.



Assembly

1. Plug the head cable into the socket, aligning the pins correctly.
2. Plug the device into an electrical outlet.

Important—make sure the machine is turned off when connecting the head to it.

Usage

1. Turn the head's movable ring clockwise until you hear a "click" and the indicator is above the open padlock.
2. Remove the test rod and insert the cutter of your choice.
3. Turn the movable ring counterclockwise until you hear a "click" and the indicator is over the closed padlock. The jaws are now closed.



4. Connect the head to the router and turn on the machine.
5. Select the cutter's rotation direction (clockwise/counterclockwise).

Important

- The cutter should be replaced after the machine has been turned off.
- Changing the cutter while the router is running at minimum speed may cause the head to overheat, resulting in damage (not covered by the warranty).
- Unlocking the Twist-Lock chuck while the machine is running will damage the clutch. This damage is not covered by the warranty. The router must be turned off when changing the cutter.
- Before changing the rotation direction from clockwise to counterclockwise, you must absolutely turn off the machine and wait until the cutter has come to a complete stop.

Maintenance

- Metal, stone, and diamond burs can be sterilized in a sterilizer. Felt burs and brushes should be cleaned with a disinfectant solution.
- Do not soak the head or disinfect it with an excessive amount of liquid. Water or disinfectant that gets inside the head may damage it. Remove any dust from the head before disinfecting it. It is recommended to maintain the head using products designed for this purpose.
- The brush head should be cleaned and protected from dust.
- Claims resulting from improper use or damage to the print head caused by dust will not be honored.

Note

- The mechanism that opens the jaws may offer greater resistance when the cutter is not in the chuck. This is normal and is due to the head's design.
- Our products should only be used with original accessories and parts.
- When plugging in the power cord, do not touch its metal parts.
- Do not use oil to clean the head.
- Do not expose the head to damage. The device's design means it can be damaged if dropped or struck. If the head is dropped, make sure everything is functioning properly before turning on the device.
- Use the cutters recommended by the manufacturer. Do not use curved cutters.
- Handle all components with care and gentleness.
- Keep your work area and the device clean, especially the cutting head.
- Use the device in accordance with safety precautions.
- If the head, cord, plug, or outlet is damaged, replace the damaged part before continuing to use the device.
- When unplugging the device, do not pull on the cord.
- Do not place the device near flammable substances.
- Do not allow children to use the device.
- Wear a dust mask and safety goggles, and ensure proper ventilation in the room where you are working.
- If you are using the head at high speed, first check its operation and vibration level at a lower speed.
- When you are not using the device, unplug it from the power source.
- Before turning off the power, turn the potentiometer counterclockwise to the minimum position, then turn off the device by setting the power switch to the "0" position.
- Do not unplug the power cord from the base while the device is in operation.

Recommendations

1. Make sure you have installed the device on a flat, stable surface to reduce the risk of it falling and becoming damaged.
2. Never leave the device plugged in and unattended.
3. Use the device as intended, as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or submerged in water.
6. Do not pull directly on the cord to unplug the device from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions

1. This device is professional equipment intended for use in beauty salons. To avoid adverse effects during treatment, the device must be operated exclusively by qualified beauty professionals.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All service and repair work must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands.

Ensure that no liquids enter the device.

4. Immediately unplug the device from the outlet and contact the authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device, b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place any foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent hazards.
2. This device may be used by children at least 8 years of age, by persons with reduced physical or mental capabilities, as well as by persons unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on how to use it safely and understand the associated risks.
3. Do not leave the device unattended when children or people who lack sufficient knowledge of how to use the device are nearby.
4. This device is not intended for use as a toy by children. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical devices must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively in its original packaging. Store it in a well-ventilated room with a relative humidity of no more than 90%. Operating temperature range: from (+)10°C to (+)40°C. During storage and transport, the device must not be thrown or dropped, nor should it be exposed to mechanical shocks or the elements.