

ACTIVESHOP[®]

Instructions for use

SILLON Eclipse 3 sil electric cosmetic chair.



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, bud.
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/06/2025



Scan for
different
language
s



Dimensions:



Features and functions:

- **EASY ADJUSTMENT:** The backrest and seat of the cosmetic chair can be easily adjusted with the "Effortless Button" side button, allowing you to conveniently adjust the client's position during treatment.
- **Integrated Functionality:** The chair has four adjustment methods: back tilt, seat, footrest and height adjustment.
- **User-friendly design:** The chair has a modern, intuitive design that provides simple operation and comfort, which enhances the overall experience and brings an element of pleasure to daily work.
- **High stability:** the chair is characterized by high stability and a high level of safety - there is no noticeable wobbling, regardless of the set angle or height.

Remote control:



Press  or , to control the angle of the seat back.

Press the button  or , to control the seat footrest.

Press  or , to raise or lower the entire seat.

Warning:

1. The footrest is not designed to support the full weight of an adult.
2. Do not sit directly on the armrest and footrest.
3. Make sure that the distance between the sockets does not exceed 2 meters.

Attention!

- For safety reasons, always connect the power cord to a grounded outlet.
- Do not tie the power cord to the device. Lifting or pulling the power cord may damage it. Make sure the power cord can be easily removed in an emergency.
- Before moving the electric beauty chair, remove the power cord so that it does not get stuck between some parts of the chair.
- If the power cord is damaged, immediately disconnect the cord, do not use the chair and contact an authorized service center. Use only the original power cord.
- Do not let the person who is not performing the procedure control the control remote control.
- Do not place any objects under the chair.
- Make sure there is enough free space around the chair.
- Make sure there are no sharp or harmful objects around the chair that could damage the device.
- Do not modify the device yourself. If the chair does not work properly, stop using it and contact an authorized service center.

Cleaning and disinfecting the device:

Disconnect the device from the power supply before cleaning.

To keep the chair's surface in good condition, clean it regularly. Remember to clean and disinfect the chair after each use. It is recommended to perform a thorough disinfection once a month.

I Metal and plastic surfaces

To clean metal and plastic surfaces and controls wipe them with a damp cloth. To clean hard-to-reach areas or corners, a small brush will work well. Do not use too much liquid to clean the device. Then disinfect the device with a suitable liquid.

II Stainless steel surfaces

Cleaning with a mild detergent solution will work best. Ammonia and most solvents can be used to remove tough stains. Avoid chlorine-based solutions.

III Painted or chrome-plated metal surfaces

Do not use water jets (shower, high-pressure water cannons) for cleaning.

Do not clean in high temperature and high humidity, and do not expose the device to conditions that may lead to liquid contamination.

Do not use solvents and acids for cleaning.

IV Chair surface

- Wipe the seat surface evenly with a special leather cleaner, then wipe it with a clean, soft cloth.

Maintenance

Unplug the device before maintenance.

1. Repairs should be performed by experienced and manufacturer-authorized personnel. Repairs by unauthorized personnel may cause injury or damage to the device, for which the manufacturer is not responsible.
2. Use only original spare parts approved by the manufacturer.
3. Do not use the electric beauty chair or accessories if they are not working properly.
4. All maintenance and repair work must be documented.

Maintenance measures

Check the controls and their wiring once a week. Check the condition and function, of the following items at least once every six months:

1. Power cord and its attachment
2. Motor wiring
3. The control box and its wiring
4. Whether accessories are attached
5. Normal operation of the locking system

If you find any defects, stop using the chair and contact an authorized service center. Only experienced or authorized personnel can open or replace the actuator / control unit.

If any part of the device is damaged, unplug the power cord and stop using it. Then notify the service center.

Technical data:

- Product dimensions: 1930× 820× 670-870 mm
- Backrest adjustment angle: approximately 85° maximum
- Seat tilt angle: approximately 12° maximum
- Footrest adjustment angle: approximately 90° maximum
- Net weight: 96 kg
- Gross weight: 110 kg
- Maximum load: 140kg
- Power supply: AC 100-120 V, 50/60 Hz or AC 220-240 V, 50/60 Hz
- Maximum power: 300 W

Problem	Cause	Solution
When any button is clicked, the seat does not respond	a) The function of the pressed button has been switched to an extreme value b) Check if the power plug is properly connected c) Quality problem control panel manual	a) Try pressing other buttons b) Disconnect and reconnect the power plug c) Replace the manual control panel
Strange sound and vibration when raising and lowering the seat.	a) Screws are loose b) Rotating parts are not lubricated enough c) Quality problem Motor	a) Tighten all screws b) Add some grease c) Replace the motor

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so, so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. In case of a fall, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on how to use the equipment in a safe manner, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then

transfer to collection points for used electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

STORAGE AND TRANSPORT

The device should be transported at temperatures in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.