

ACTIVESHOP[®]

USER MANUAL

MOMO P30 60W Built-In Dust Collector

TP825



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/10/2025



Scan for
different
languages



 
 
Thank you for choosing our product.

Please read the user manual before first use and keep it for future reference.

The Momo P30 built-in dust collector reduces the amount of dust particles suspended in the air during milling procedures, helping to maintain safe and comfortable working conditions for stylists and clients. Its high efficiency helps keep the workstation clean and reduces dust buildup on surfaces. The countertop-mounted design simplifies workstation organization and allows for better use of available space. Effective filtration helps maintain high hygiene standards in the salon.

Device Description

- 1 On/Off button and speed control
- 2 Power indicator
- 3 Power outlet
- 4 Absorber filter
- 5 Mounting location

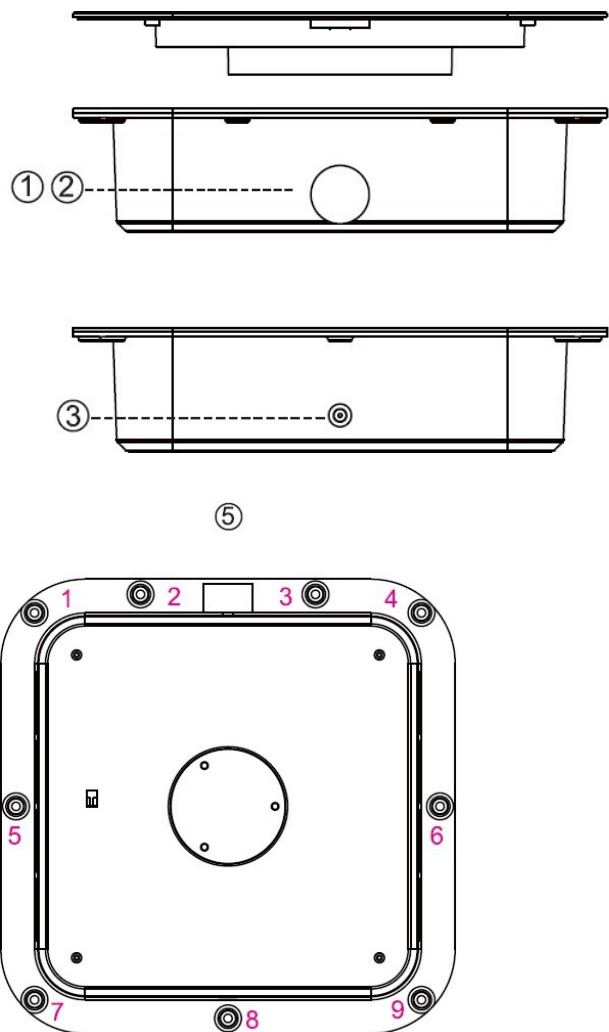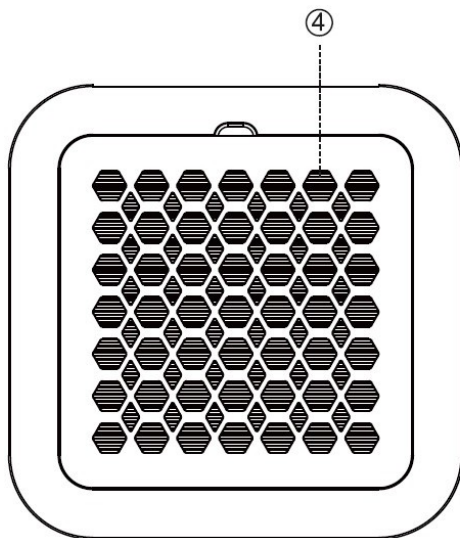


Installation instructions

Sit at your desk and check where your hands naturally rest while you work. Mark the center of this area on the desk surface. Make sure there are no desk legs or drawers in this spot underneath the desk.

The kit includes a mounting template on transparent film that makes it easy to position the device precisely.

- 1 Place the film on the tabletop where you plan to install the device and center it relative to your workspace.
- 2 Trace the cutting lines and drill holes for the screws directly onto the tabletop.
- 3 Cut out the opening along the marked lines.
- 4 Screw the dust collector to the countertop using the included screws. Be sure not to overtighten them to avoid damaging the housing.

The figure below shows the size of the opening that must be cut in the tabletop for proper installation. Dimensions are given in millimeters.

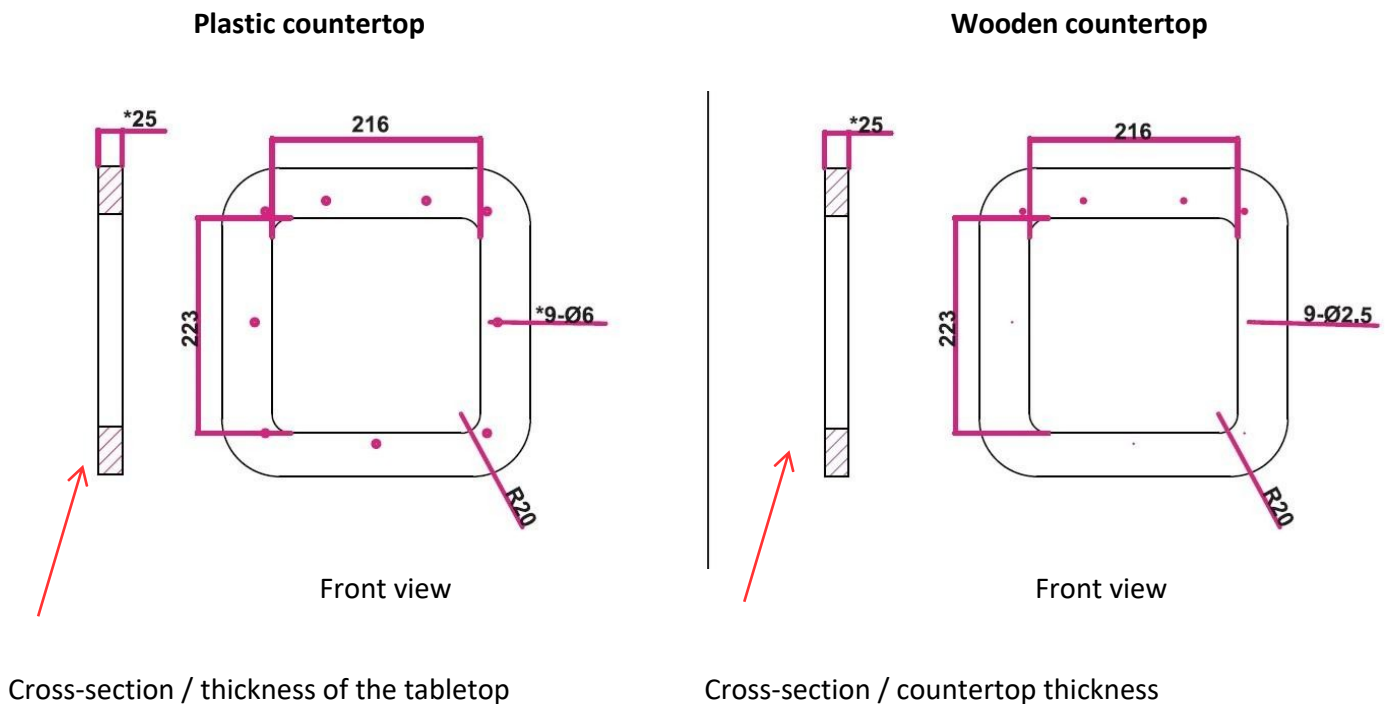

NOTE

The range hood can only be installed in a solid-core countertop (made of solid wood, MDF, or solid particleboard). We do not recommend installation in “honeycomb” countertops (hollow inside, filled with cardboard), as they do not provide sufficient stability, and the mounting screws will have no point of support. Before cutting the hole, make sure your countertop is solid throughout its entire cross-section.

User Manual:

- 1 Plug in the power cord
- 2 Turn the speed control knob clockwise to turn on the device.
- 3 Turning the knob all the way to the left turns off the air purifier.

Recommendations:

- 1 Make sure you have placed the device on a flat, stable surface to reduce the risk of it falling and being damaged.
- 2 Never leave the device plugged in and unattended.
- 3 Use the device only for its intended purpose as described in the manual.
- 4 Never use this device if the cord or plug is damaged.
- 5 Do not use the device if it is not working properly or if it has been dropped, damaged, or submerged in water.
- 6 Do not pull directly on the cord to unplug the device from the outlet.
- 7 This product is for indoor use only. Do not expose it to direct weather conditions.
- 8 Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
- 9 Do not wrap the power cord around the device.

Cleaning and Maintenance

- Before cleaning the filter and removing dust, be sure to unplug the device from the power source.
- It is best to clean the unit's housing with a damp cloth or a mild disinfectant.
- Do not clean the device directly under running water.
- Do not use abrasive or highly corrosive agents, polishes, acetone, solvents, or alcohol-based products to clean the air purifier.
- Dust accumulated on the fans should be cleaned with a small brush from both the grille side and the filter side. After removing the dust with the brush, it is recommended to use compressed air to thoroughly remove any remaining dust.

Technical Specifications	
Number of fans	1
Power	60W
Maximum speed	4,500 RPM
Fan input voltage	DC 24V/2A
Power supply input voltage	220–240 V ~ 50/60 Hz
Filter	Cassette
Filter dimensions	17.5 x 17.7 cm

Notes

- The filter is reusable. However, be sure to clean it regularly to prevent the buildup of dirt, dust, and other unwanted substances. Replace the filter with a new one as needed. Failure to do so may result in the device malfunctioning or even becoming damaged.
- Always turn off the device using the knob before completely stopping operation.
- Store the air purifier out of the reach of children.
- Do not use or store the device in rooms with high humidity.
- Do not plug the device into or unplug it from an outlet with wet or damp hands.
- Do not use the device near flammable substances such as: alcohols, solvents, gasoline, aerosol sprays, etc. This may result in an explosion or fire.

Recommendations

1. Make sure you install the device on a flat, stable surface to reduce the risk of it falling and becoming damaged.
2. Never leave the device plugged in and unattended.
3. Use the device only for its intended purpose as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or submerged in water.
6. Do not pull directly on the cord to unplug the device from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions

1. This device is professional equipment intended for use in beauty salons. Operation of the device exclusively by qualified beauty professionals helps prevent adverse effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device from the outlet and contact the authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device, b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place any foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off, and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent hazards.
2. This device may be used by children aged 8 and older, by persons with reduced physical or mental capabilities, and by persons unfamiliar with how this equipment, provided they are given appropriate supervision or instruction on how to use it safely and understand the associated risks.
3. Do not leave the device unattended when children or people who lack sufficient knowledge of how to use the device are nearby.
4. The device is not intended for use as a toy by children. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical devices must be collected separately and taken to collection points for waste electrical and electrical equipment. Follow the guidelines for disposing of this type of equipment and do not place it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively in its original packaging. It should be stored in a well-ventilated room with a relative humidity of no more than 90%. Operating temperature range: (+)10°C to (+)40°C. During storage and transport, do not throw or drop the device, or expose it to mechanical shocks or weather conditions.