

ACTIVESHOP[®]

USER MANUAL

Sillon 210 hydraulic beauty chair



Importer:

ACTIVESHOP Sp. z o.o.

ul. Graniczna 8b, bud. DC2A

54-610 Wrocław, Poland

www.activeshop.com.pl

Rev. A/05/2025


Scan for
different
languages




Dimensions:





Assembly:

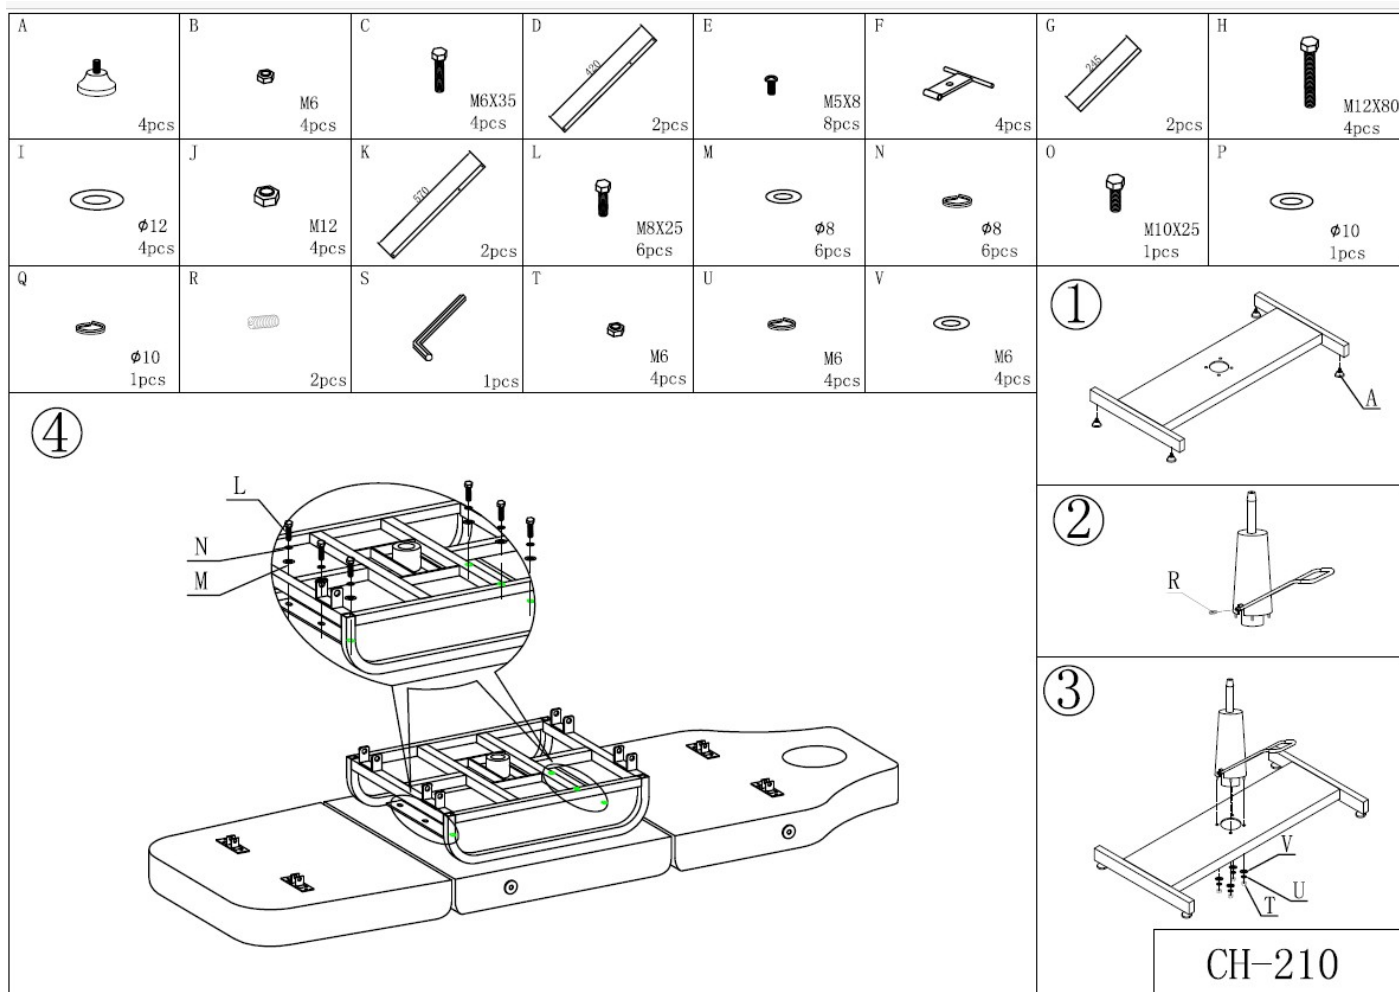


1. Insert the washers into the chair base.
2. Mount the height adjustment lever on the actuator using the R element.
3. Place the cylinder on the chair base and tighten it using parts V, U, and T.
4. Place the metal seat frame on the bottom of the chair and then secure it using elements L, M, and N.

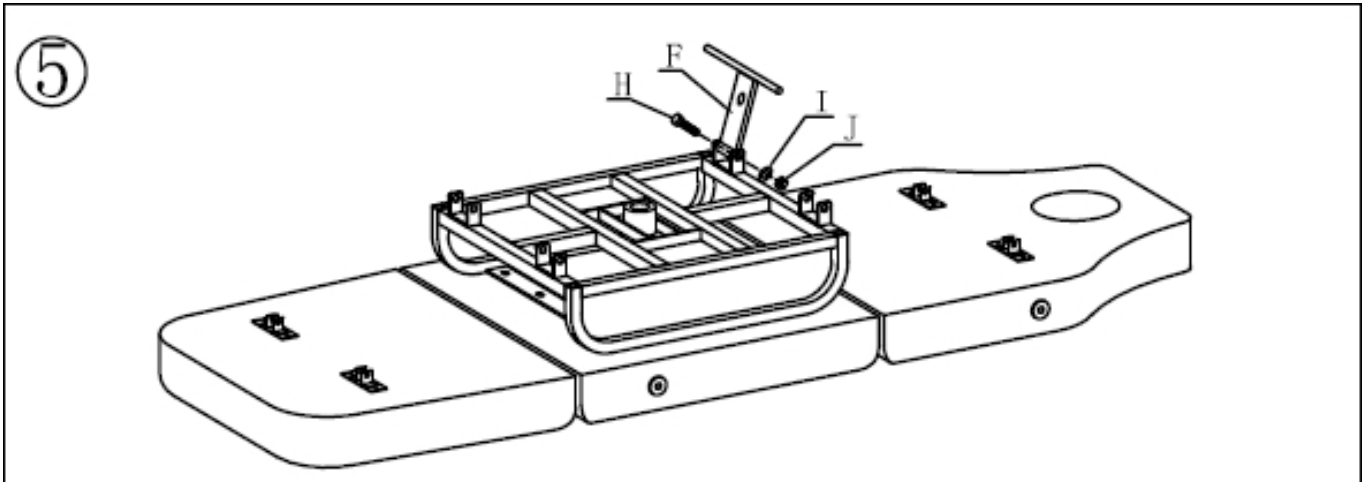


5. Install part F by tightening it with parts I, J, and H.

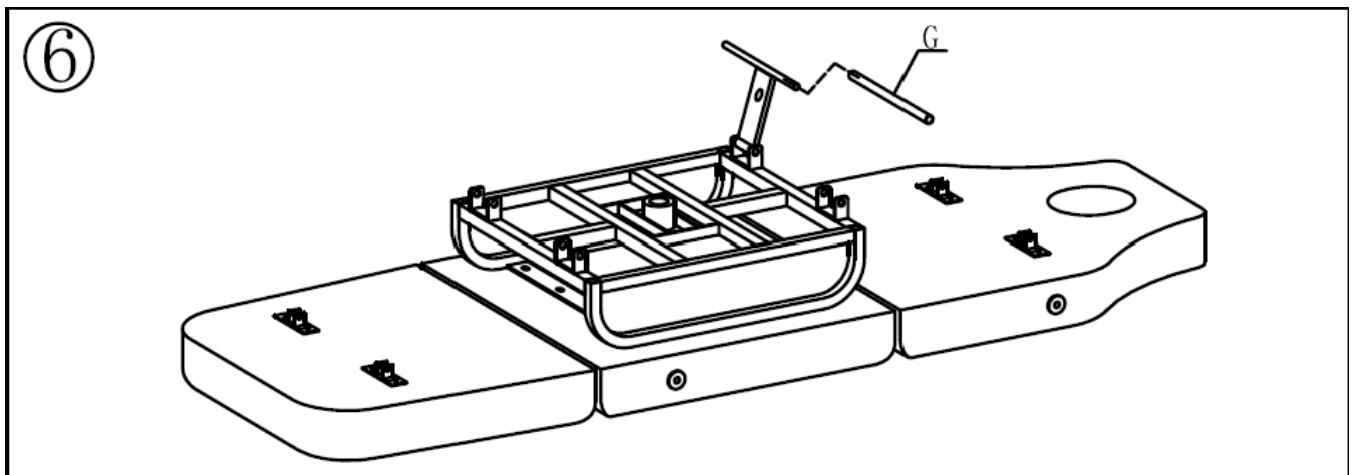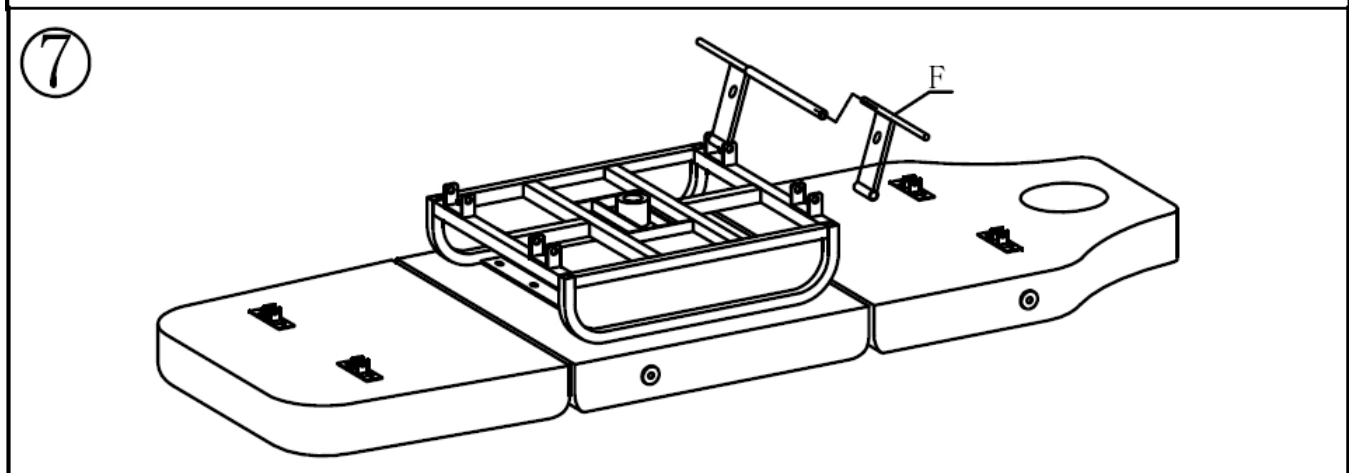


- 6,7. Use element G to connect the two elements F together.

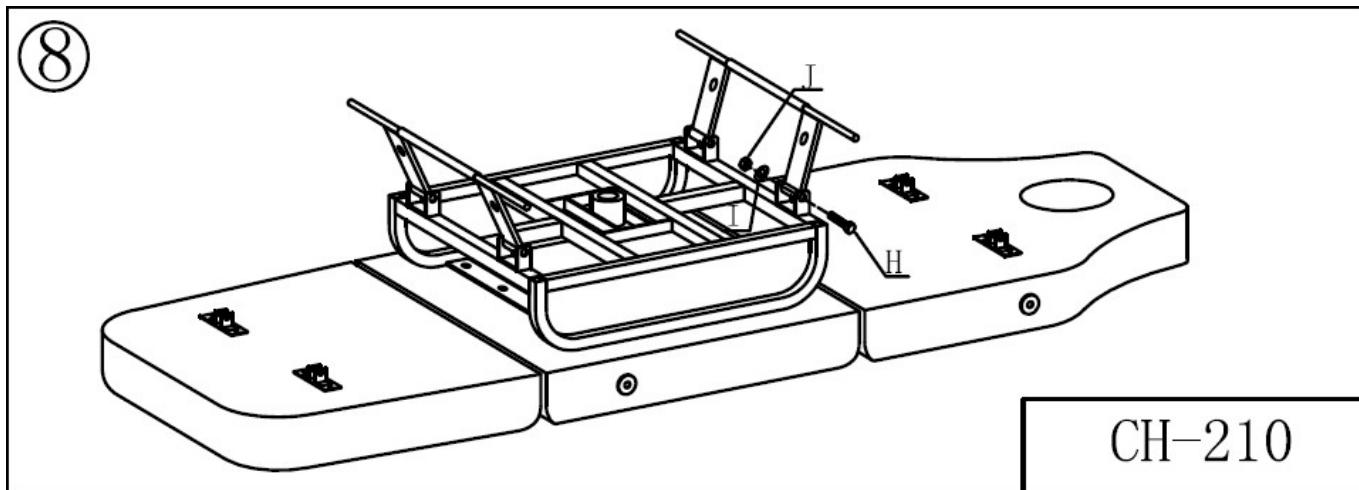


8. Tighten using elements J and H, then repeat on the other side.

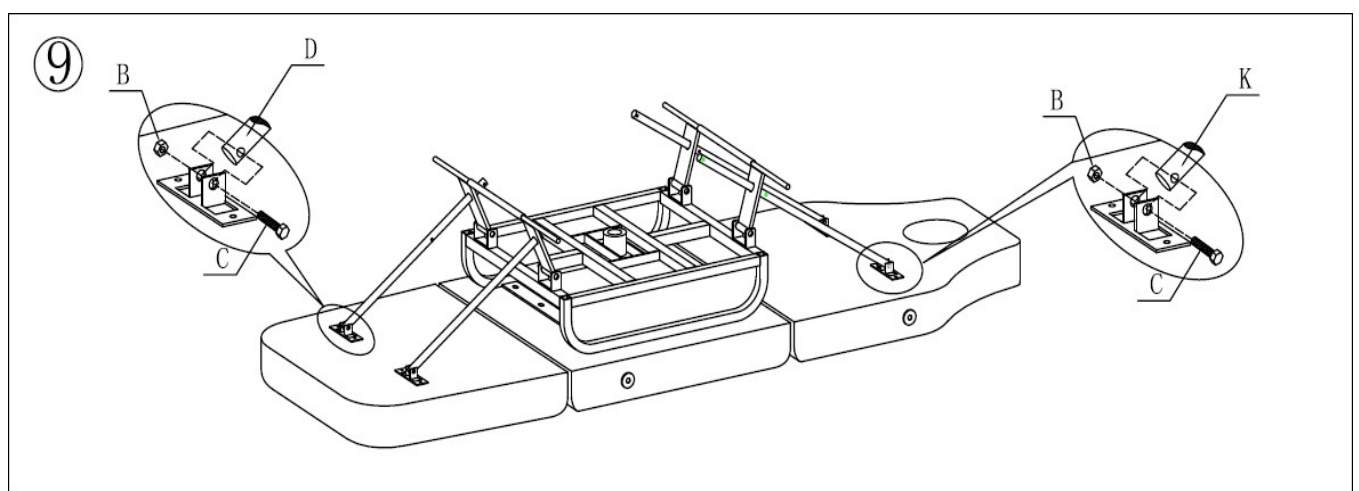

9. Insert elements D and K, then screw them in using B and C.

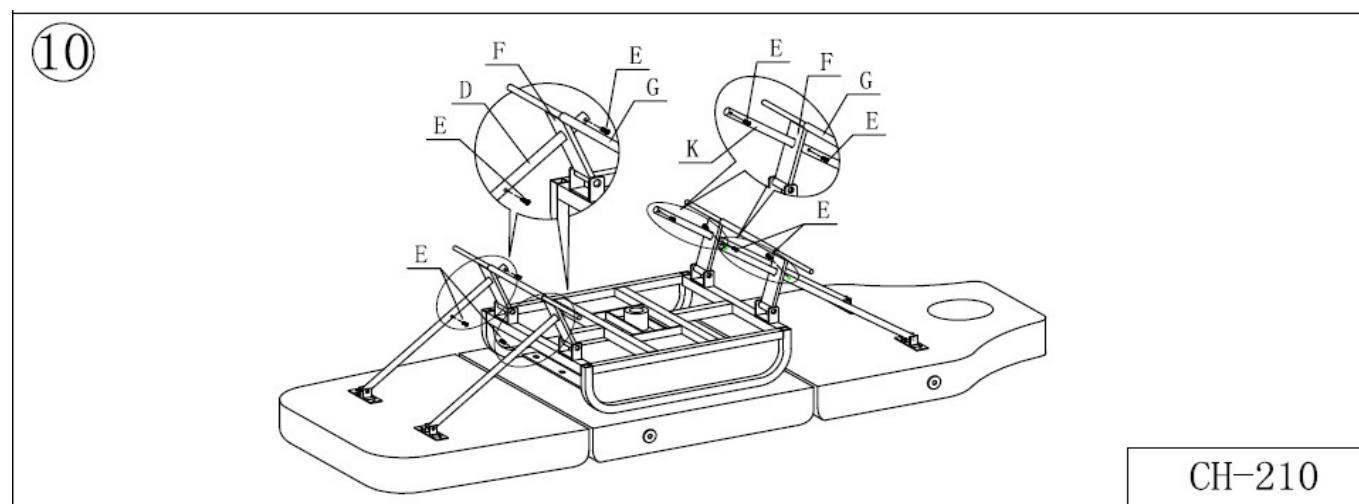

10. Secure the brackets using elements E.

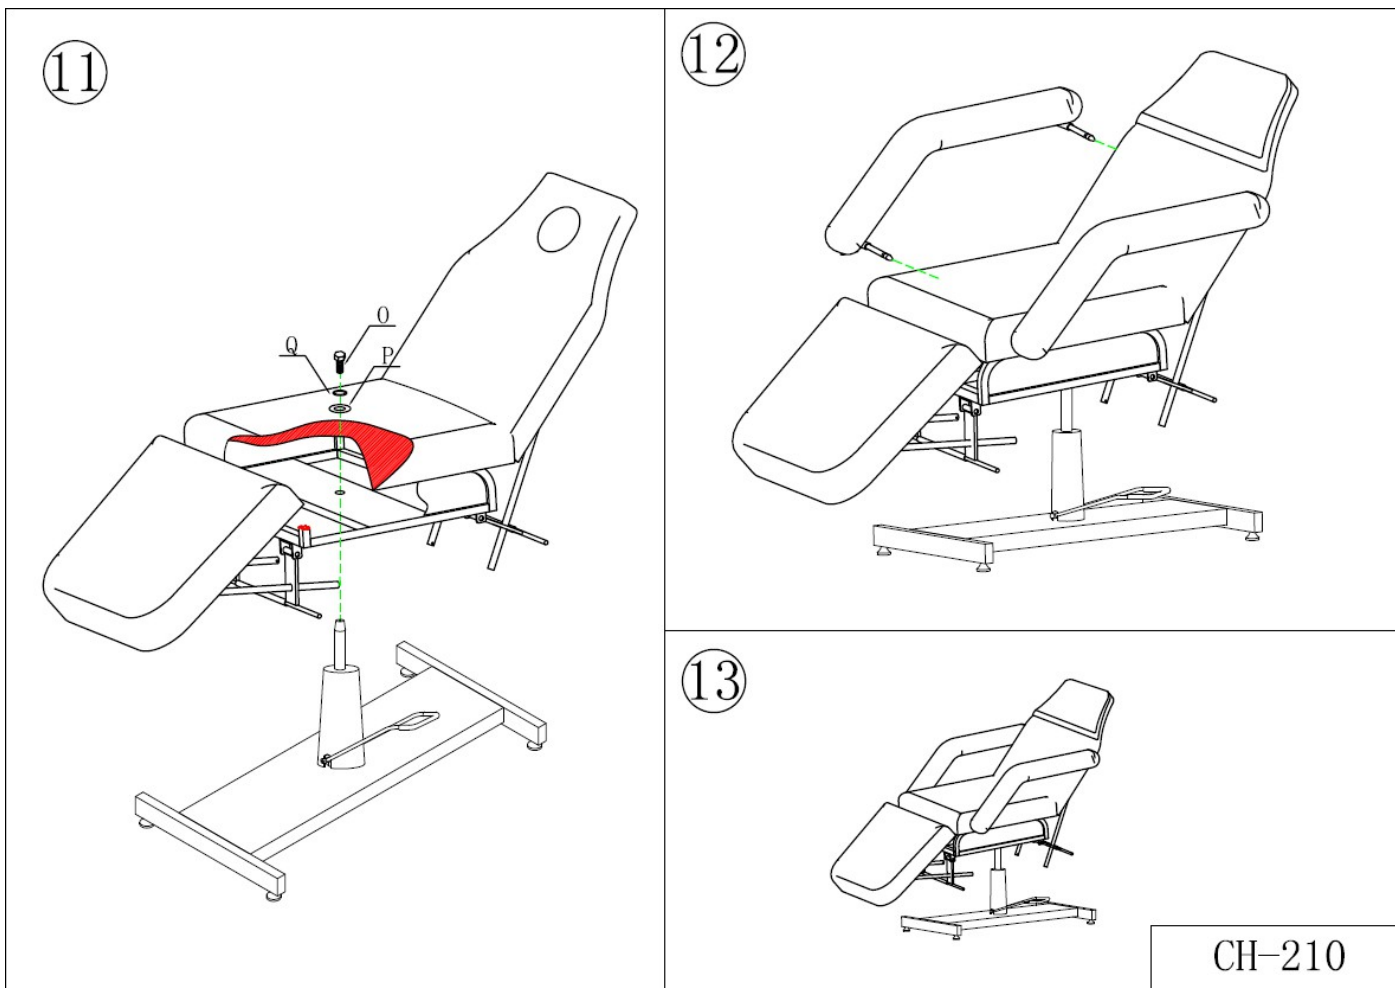

11. Place the seat on the actuator pin, then tighten it using elements Q, P, and O.

12. Insert the armrests as shown in the illustration.

Chair functions:

- Lifting the seat: lift the seat by pressing the lever
- Lowering the seat: press down until it is fully lowered
- Seat rotation lock: lift the lever up as far as it will go

Warning!

Do not sit down abruptly or throw heavy objects onto the chair. It is forbidden to move or carry the chair while there are people or other heavy objects on it. Do not stand on the chair with your feet or knees, swing on it, sit on the armrests, or allow more than one person to sit on it.

Cleaning and disinfecting the device:

Unplug the device before cleaning.

To keep the surface of the chair in good condition, it should be cleaned regularly. Remember to clean and disinfect the chair after each use. It is recommended to perform thorough disinfection once a month.

I Metal and plastic surfaces

To clean metal and plastic surfaces and controls, wipe them with a damp cloth. A small brush works well for cleaning hard-to-reach areas or corners. Do not use too much cleaning fluid on the device. Then disinfect the device with a suitable liquid.

II Stainless steel surfaces

A mild detergent solution works best. Ammonia and most solvents can be used to remove stubborn stains. Avoid chlorine-based solutions.

III Painted or chrome-plated metal surfaces

- Do not use water jets (shower, high-pressure water cannons) for cleaning.
- Do not clean at high temperatures and high humidity, do not expose the device to conditions that may lead to liquid contamination.
- Do not use solvents or acids for cleaning.

IV Seat surface

- Wipe the surface of the chair evenly with a special leather cleaner, then wipe it with a clean, soft cloth.

Maintenance:

1. **Daily cleaning**
Remove dust with a soft, dry cloth.
2. **Removing stubborn dirt**
As we know, it is difficult to remove stubborn dirt using a regular dry cloth. In such cases, first use a soft cloth with diluted neutral detergent, then wipe with a dry cloth.
3. **It is prohibited to use benzene, thinners, gasoline, or other solvents.**
These agents can damage the leather or cause corrosion of the product.
4. **Storage and operating conditions**
Do not expose the product to strong sunlight or moisture. Otherwise, it may damage the product.

SAFETY PRECAUTIONS

The device is professional equipment for use in beauty salons. The device should only be operated by qualified beauty salon staff to avoid undesirable effects during treatment.

Do not disassemble the device or attempt to use it for purposes other than those indicated in this user manual. All service and repair work must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).

Do not install or operate the device near liquids, wet areas, or with wet hands, so that no liquids can get into the device.

Immediately unplug the device and contact an authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases:

- a) liquid has entered the device, b) the device emits a strange odor, smoke, or strange noises,
- c) the power cord is damaged, d) the device has been knocked over or its casing is damaged.

Do not place any objects on the cables. Do not install the device in places where someone could step on the power cord.

For safety reasons, unplug the power cord from the outlet after each use of the device.

Do not insert anything into the opening in the device. If a foreign object gets into the opening, unplug the cord from the outlet and contact your distributor or manufacturer.

Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.

To ensure the specified service life of the device, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).

The power supply must comply with the specifications on the rating plate. Otherwise, there is a risk of incorrect operation, damage, or even burning of the device.

CAUTION:

In the event of damage to the power cord or other malfunctions, contact an authorized service center to avoid danger.


This device can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they are supervised or instructed on how to use the device safely so that the associated risks are understood.

The device is not intended for children to play with. Do not allow children to play with the device.

Do not leave the device unattended when children or persons who do not have sufficient knowledge of how to use the device are in its vicinity.

This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a risk to health or lead to death, so the appliance must be used and stored out of the reach of children.

DISPOSAL OF THE DEVICE

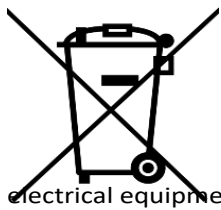

Used electrical appliances, equipment, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical appliances should not be disposed of in household waste containers. Follow the rules for disposing of this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used

electrical equipment should be collected separately and then transferred to collection points.

collection of used electronic and electrical equipment. At the end of their useful life, old devices contain valuable recyclable components, which is why they should be sent for recycling. They should therefore be taken to appropriate collection points, or they can also be handed over to ACTIVESHOP Sp. z o.o.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (–) 20 °C and (+) 50 °C, exclusively in its original packaging. The device should be stored in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature range: (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, expose it to mechanical shocks or atmospheric factors.

