ACTIVESHOP®

USER MANUAL

Sillon Elysia SPA Pedicure Beauty Chair

SPA (1065-15)



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/06/2026

Scan for different languages

Thank you for choosing our product.
Please read the user manual before first use and keep it for future reference.

The Sillon Elysia **SPA** pedicure **chair** is a comprehensive workstation for foot care treatments. The combination of a comfortable chair and a practical footbath creates an elegant treatment space that highlights the professional character of the interior. The chair's swivel feature increases freedom of movement, facilitates access to the client, and allows for better adjustment to the layout of the workstation.

Technical Specifications	
Upholstery material	synthetic leather
Sink material	fiberglass
Seat filling	foam
Maximum load	150 kg

Additional information

- Hardware
- Footrest – extends over 20 cm (6 adjustment levels)
- Illuminated shower pan
- Nubs on the bottom of the shower tray that serve as a massager and anti-slip feature
- Drainage function and a plug for regulating water flow
- Water connection hidden at the back of the base
- Velcro-fastened cushion
- Seat rotates 90 degrees to the left or right

Device Construction



1. Cushion
2. Backrest
3. Armrest
4. Seat
5. Footrest
6. Shower tray
7. Base


Before beginning assembly

- Make sure that all components are included in the box (chair with base, illuminated pedicure basin with battery, fittings). If any accessories are missing, contact customer service.
- Place the chair in a room with a temperature between +10°C and +40°C and relative humidity between 30% and 75%. If the chair has been exposed to temperatures below 0°C, let it sit at room temperature


for at least 5 hours.

Assembly

1. Secure the backrest using four screws (red lines).
2. Then secure the rear cover with two screws (blue line).

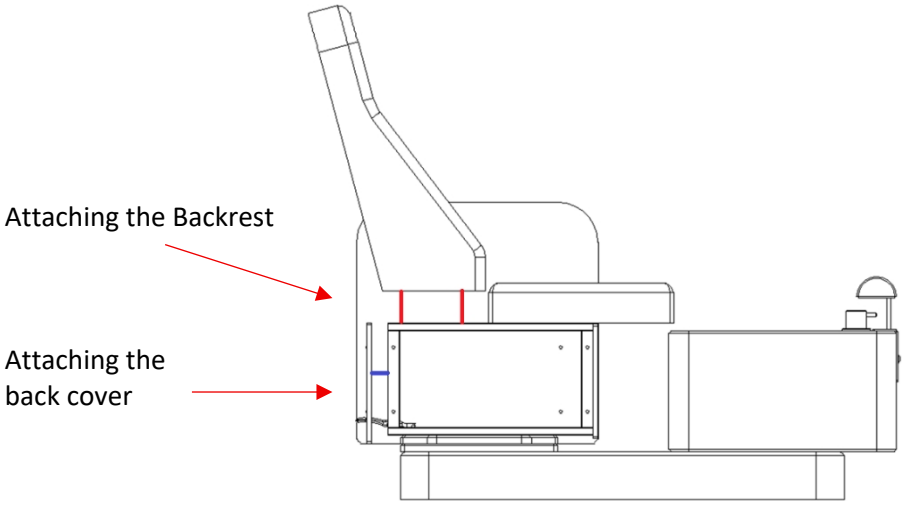

3. Connect the water supply
4. Plug the power cord into an outlet.

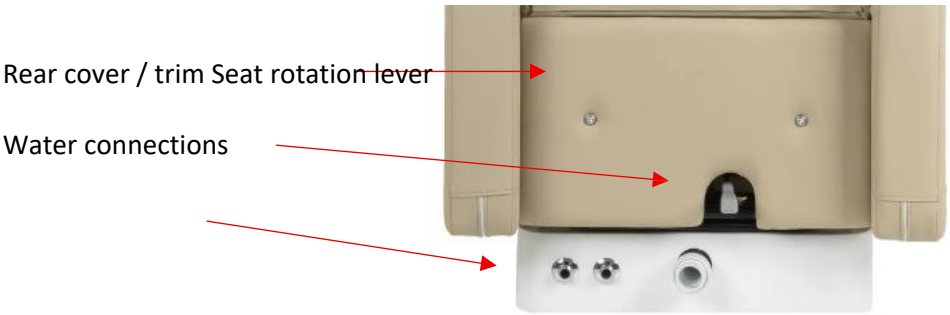

Shower pan features



1. Drain plug knob
2. Drying function—press this button, and the shower pan will begin to vibrate gently to help water droplets drain into


the drain

3. Shower handle, hose length approx. 1 m
4. Water temperature control
5. Shower tray lighting function
6. Footrest adjustment button – press the button to adjust the height of the footrest

Recommendations

1. For safety reasons, always plug the power cord into a grounded outlet.
2. Do not permanently attach the power cord to the unit's frame. Make sure the cord can be easily disconnected in an emergency.
3. Be sure to unplug the power cord before moving the chair.
4. Use only the original power cord. If the power cord is damaged, immediately disconnect it from the power source and contact customer service.
5. Make sure that bystanders or customers do not move the chair or accidentally touch the control buttons.
6. Do not place any objects under the chair. If you want to use the chair's functions while sitting in it, lock the base first.
7. Ensure there is sufficient free space around the chair. Accessories and moving parts require additional space.
8. Ensure a safe environment around the chair. Do not place sharp objects or other hazards near it.
9. If the chair is not working properly, stop using it and contact customer service.
10. Do not place the chair directly next to a door.

Product Dimensions

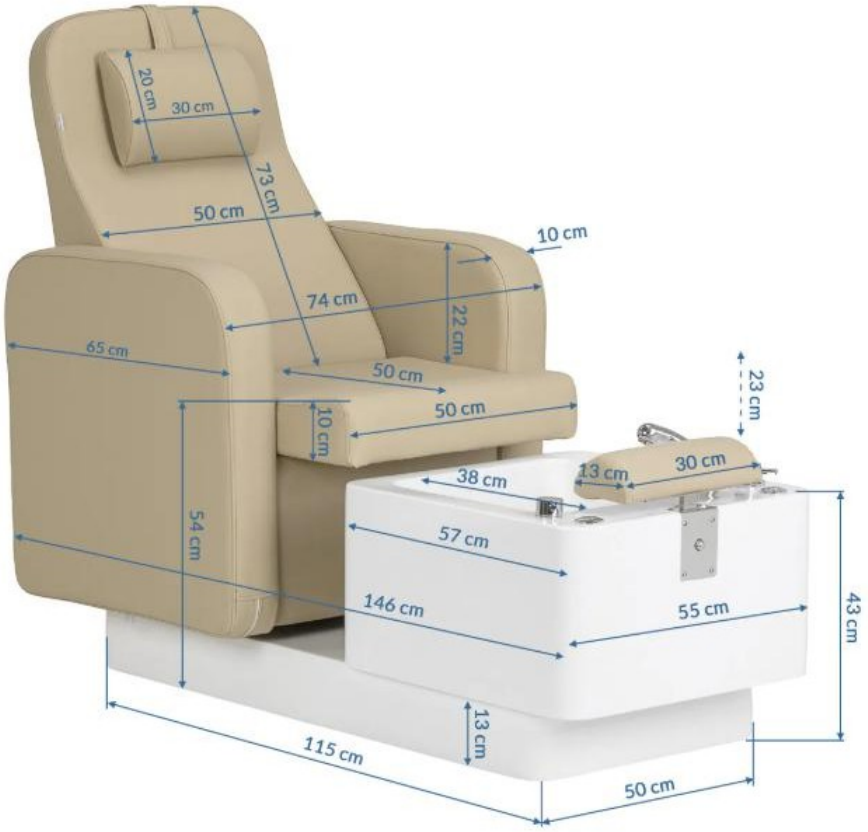

The product's dimensions may vary slightly from those shown by ± 2 cm.

Troubleshooting and Contacting Customer Service

- The pump is not responding: Check the plug connections (mark their original positions first).
- Reporting a malfunction: Before contacting customer service, have the device model and date of purchase ready.

Maintenance

To keep the surface of the beauty bed in good condition, clean and maintain it regularly. Before cleaning, be sure to unplug the power cord from the outlet.

- Metal and plastic surfaces, as well as controls, should be cleaned with a damp cloth and a mild cleaning solution. Use a small brush in corners and other hard-to-reach areas. We recommend not using too much liquid when cleaning
- Stainless steel surfaces—clean with a mild detergent solution. For removing difficult and stubborn stains, you can use ammonia and most solvents. Avoid chlorine-based solutions.
- Painted or chrome-plated metal surfaces—do not use solvents or acids for cleaning
- Bed surface—use a clean, soft cloth. You may use a small amount of a special cleaner and conditioner designed for synthetic leather.

All surfaces must be dry before plugging in the device and using it again. Do not clean in high temperatures or high humidity.

Do not expose the device to conditions that could lead to contamination with liquids.

Recommendations

1. Make sure you have placed the device on a flat, stable surface to reduce the risk of it falling and becoming damaged.
2. Never leave the device plugged in and unattended.
3. Use the device as intended, as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or submerged in water.
6. Do not pull directly on the cord to unplug the device from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions:

1. This device is professional equipment intended for use in beauty salons. To avoid adverse effects during treatment, the device must be operated exclusively by qualified beauty professionals.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device from the outlet and contact the authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device,
   b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged,
   d) the device has been knocked over or its housing has been damaged.

5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place any foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center— this will help prevent hazards.
2. This device may be used by children aged 8 and older, by persons with reduced physical or mental capabilities, as well as by persons unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on how to use it safely and understand the associated risks.
3. Do not leave the device unattended when children or people who lack sufficient knowledge of how to use the device are nearby.
4. This device is not intended for use by children as a toy. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical devices must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively in its original packaging. Store it in a well-ventilated room with a relative humidity of no more than 90%. Operating temperature range: from (+)10°C to (+)40°C. During storage and transport, the device must not be thrown or dropped, nor should it be exposed to mechanical shocks or the elements.