ACTIVESHOP®

INSTRUCTIONS FOR USE

GLOW F X 3 0 7 lamp




Importer:
ACTIVESHOP Sp. z o.o.
ul. Graniczna 8b, bud DC
2A 54-610
Wroclaw,Poland
www.activeshop.com.pl
Rev. A/03/2025

Scan for different languages

Technical data	
Power supply	DC 24V/2A
Electrical power	31W
Amount of emitted light	4000lm
CRI Color Rendering Index	≥ 90
Color temperature	3000-6000 K
Dimensions	70x4.4x25cm
Diodes	308pcs.

Remote control functions:

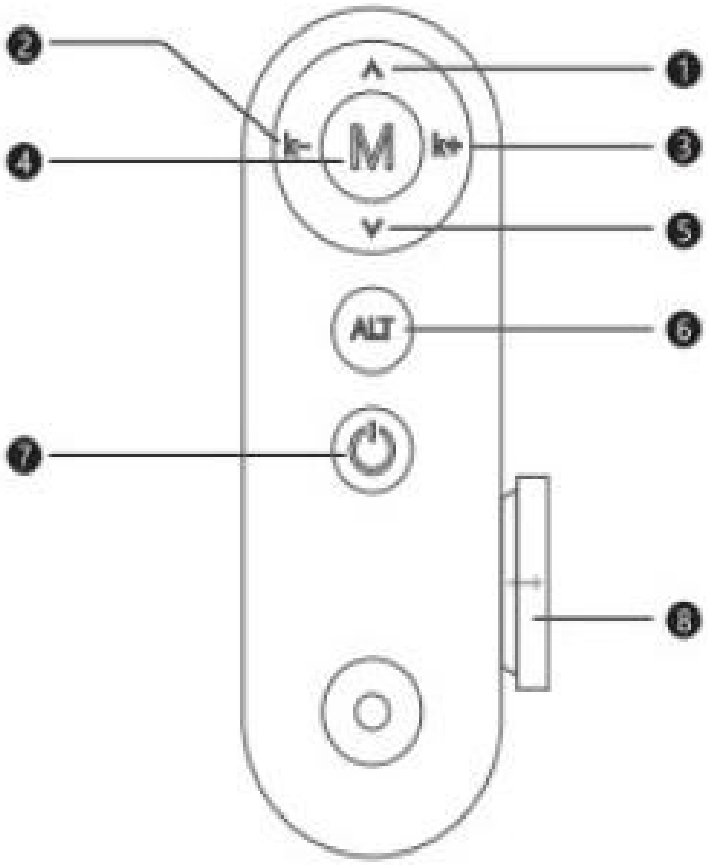

1. Brightness adjustment "+"
2. Color temperature adjustment "-"
3. Color temperature adjustment "+"
4. Lighting modes
5. Brightness adjustment "-"
6. Quick brightness adjustment
7. Power on/off
8. Switching off by sliding

Mounting:




1) Lamp body



2) Bracket

- a: Rod telescopic
- b1: Part of rack
- b2: Part rack



3) Base


4) Crossbeam




5) Adapter

6) Phone holder



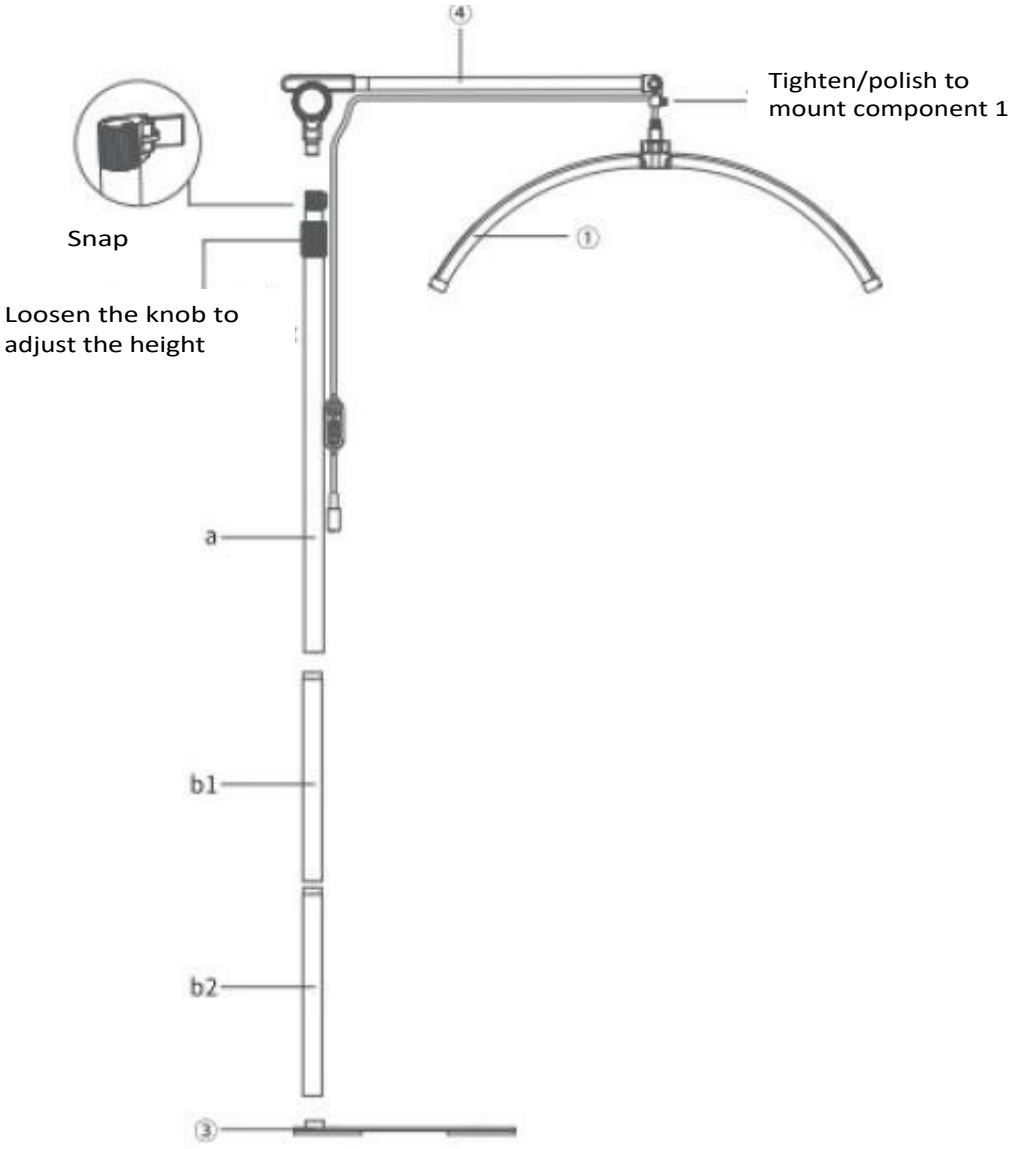


1. Unfold the lamp forward with both hands until it is fully open in a horizontal position, as shown in the figure.

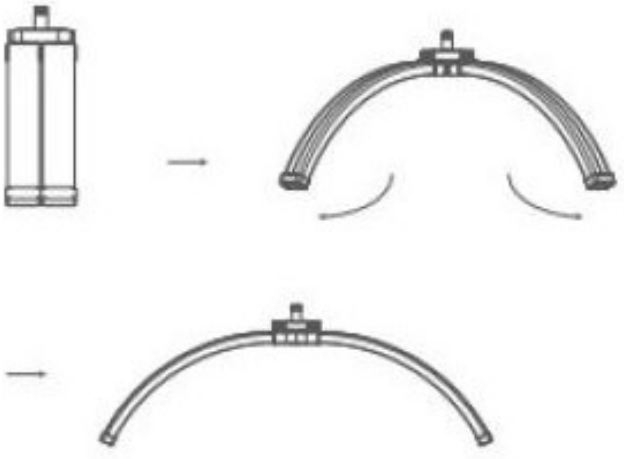

2. Fasten element 1 and 4 with screws
3. Connect elements b1 and b2 together, then screw them to element 3
4. Open the latch at the top of element A, insert element 4, and then lock it.
5. Connect to the power

Switch:

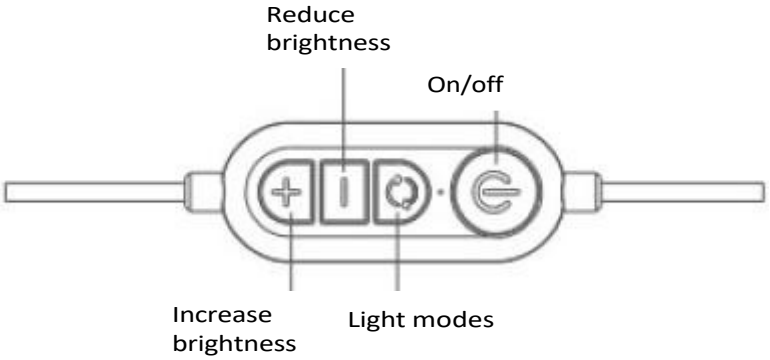

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so,
so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases:
(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device in places where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. In case of a fall, the device may
be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:
1. In case of damage to the power cord or other malfunctions, contact an authorized
service center - this will help avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with
Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment should be collected separately and then handed over to collection points for waste electronic and electrical equipment.

At the end of their useful life, and old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated room and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents