ACTIVESHOP®

USER MANUAL

557A Beauty Chair with Trays




Importer:
ACTIVESHOP Sp. z o.o.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/04/2026

Read the manual before using the beauty chair.

1. Make sure all packaging materials have been removed.
2. Make sure the chair is in good working order.
3. Place the beauty chair in the location where it will be used.


Note! Children and inexperienced persons must not use this device. Children must be supervised and must not play near the beauty chair.

Dimensions:

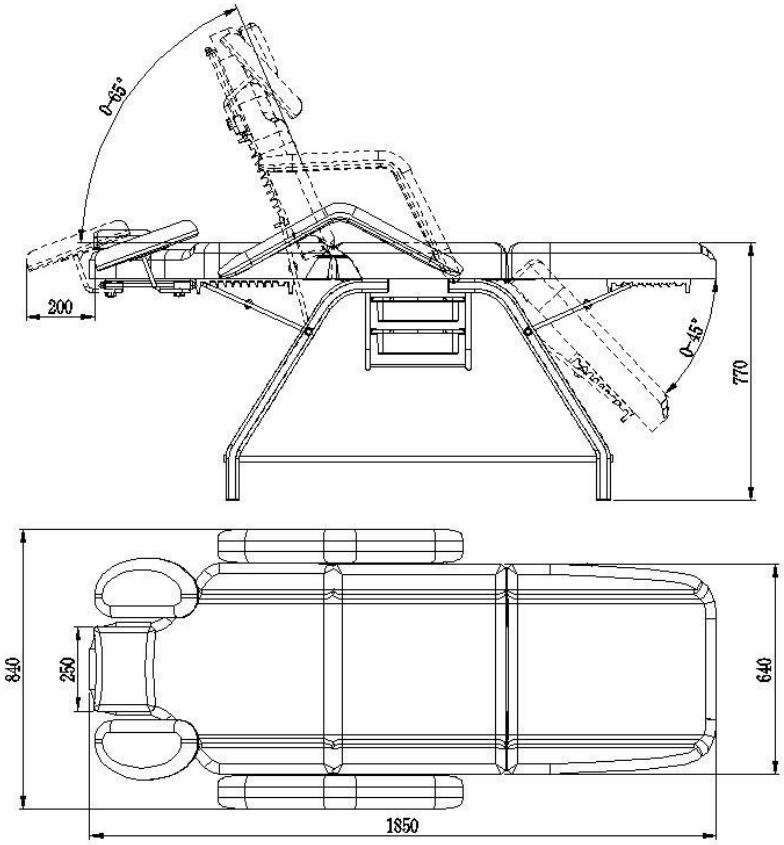


Device assembly instructions:


Install the chair frame. Place the seat on a flat, stable surface, then secure the chair frame to the seat using screws. Insert the following in order: the flat bracket (1), then the connector (2), and finally the screw (3).

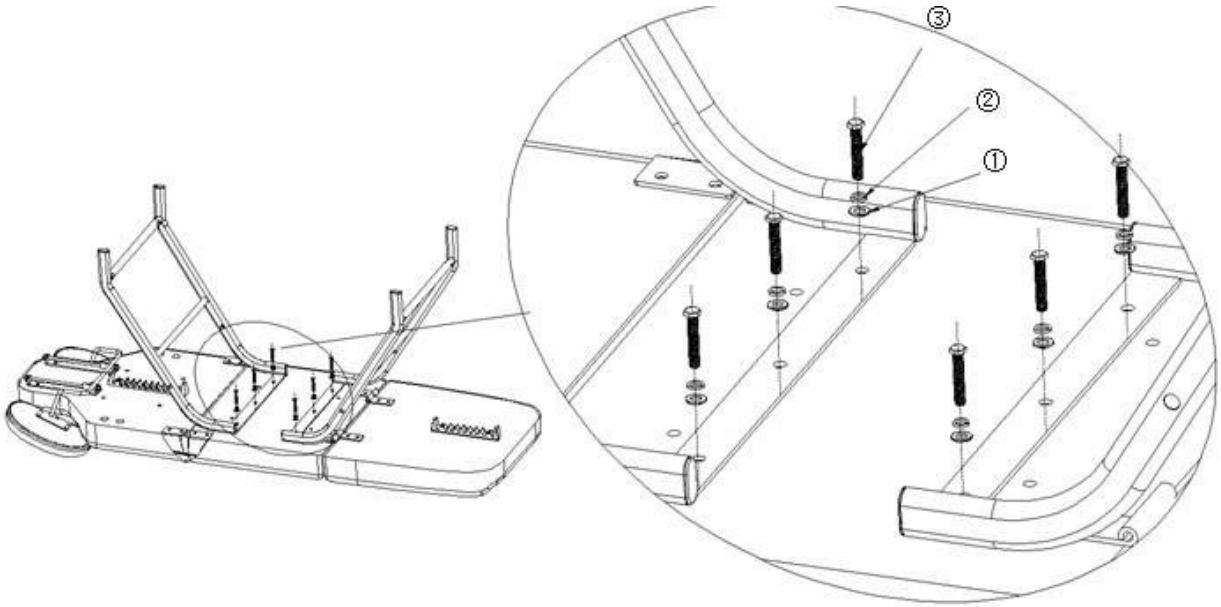


Install the tray bracket:
Place the tray bracket onto the frame and secure it with screws.

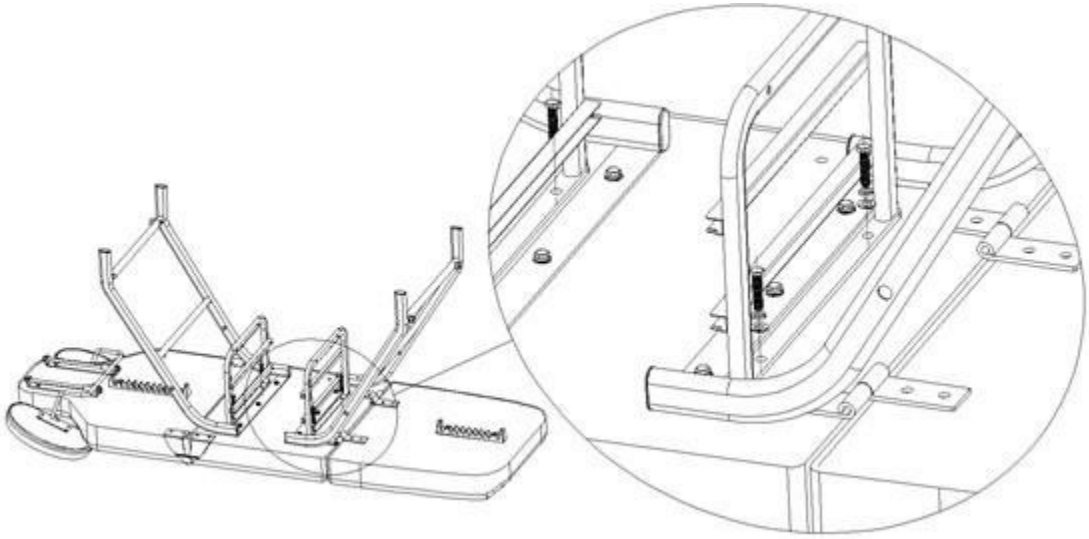


Then connect the tray bracket to the connecting tube and tighten it with screws, as shown in the photo below.

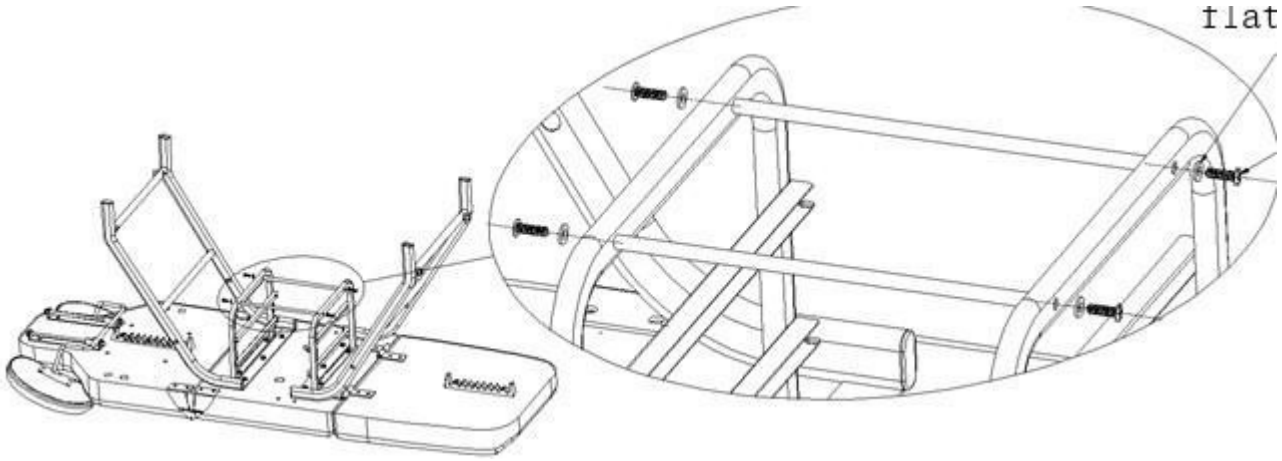

Attach the chair frame connecting rod: secure the connecting rod to the 4 holes in the chair legs using screws.

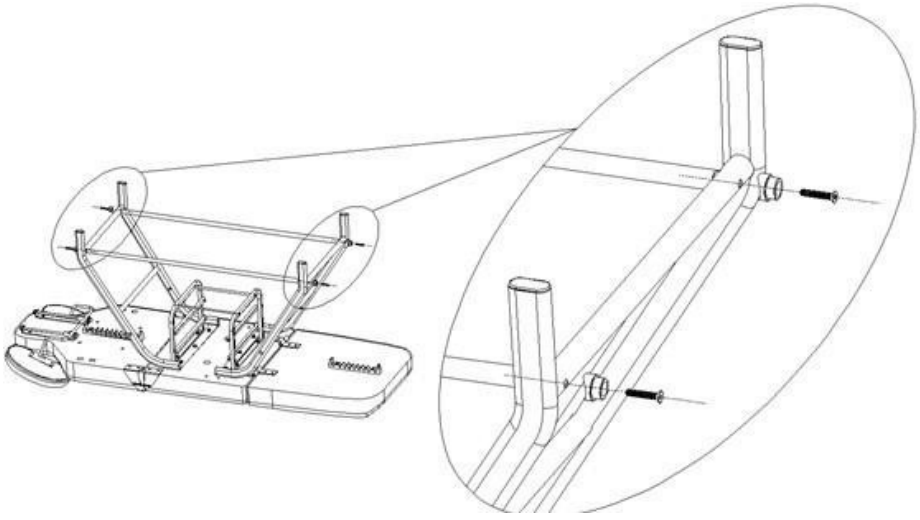


Install the backrest and footrest adjusters on both sides of the chair legs using screws (the shorter spring goes under the backrest, and the longer one under the footrest):

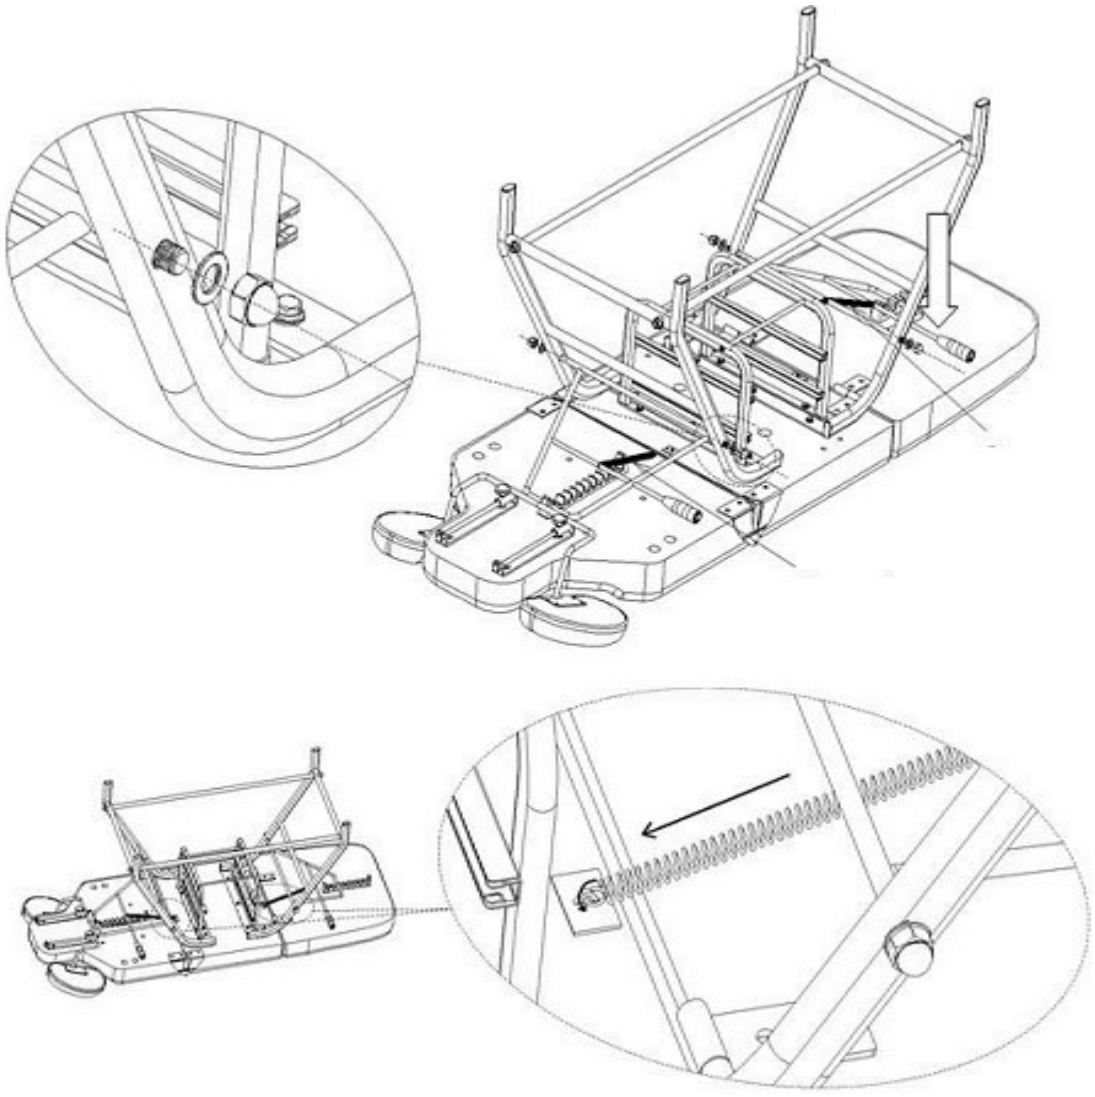


Install the armrest knob:

Align the knob with the armrest mounting hole and tighten it clockwise. Loosen the knob to adjust the armrest position as shown in the picture.

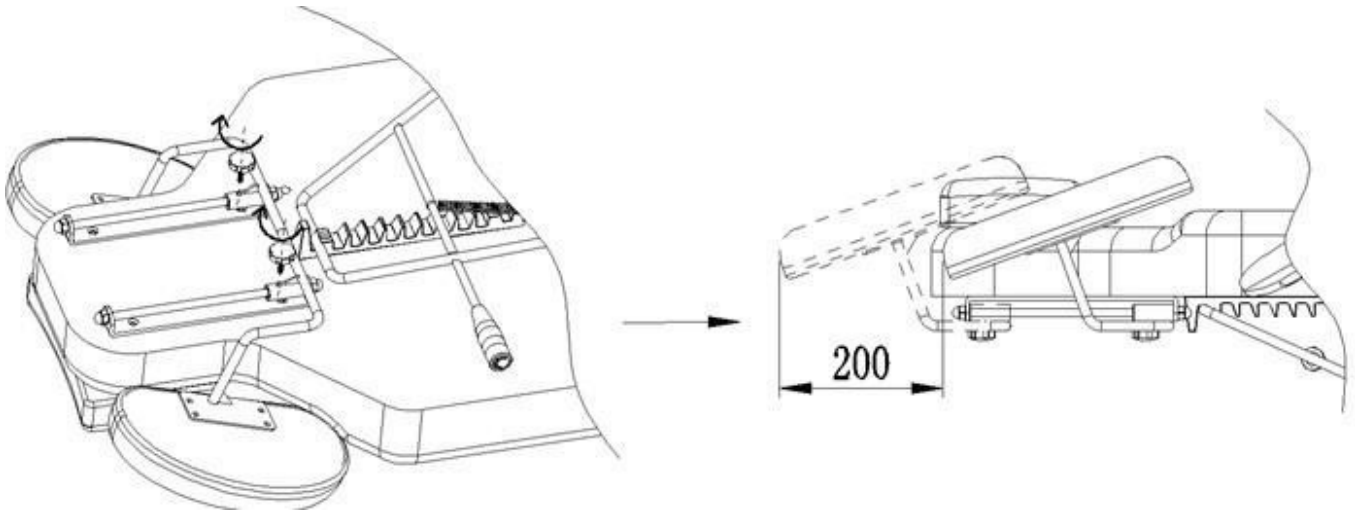


Armrest installation:

Slide the armrest into the opening on the side of the backrest. The armrest should be securely fastened. Turn it to the right or left until it clicks into place.

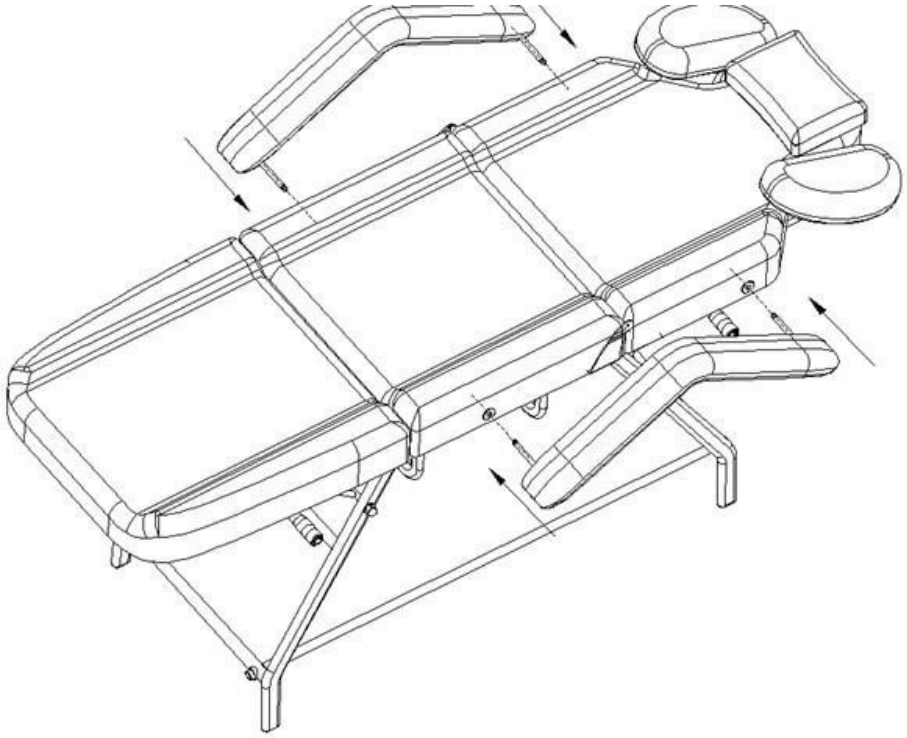

Install the container as shown in the photo below. Slide the container into the guides located under the seat.

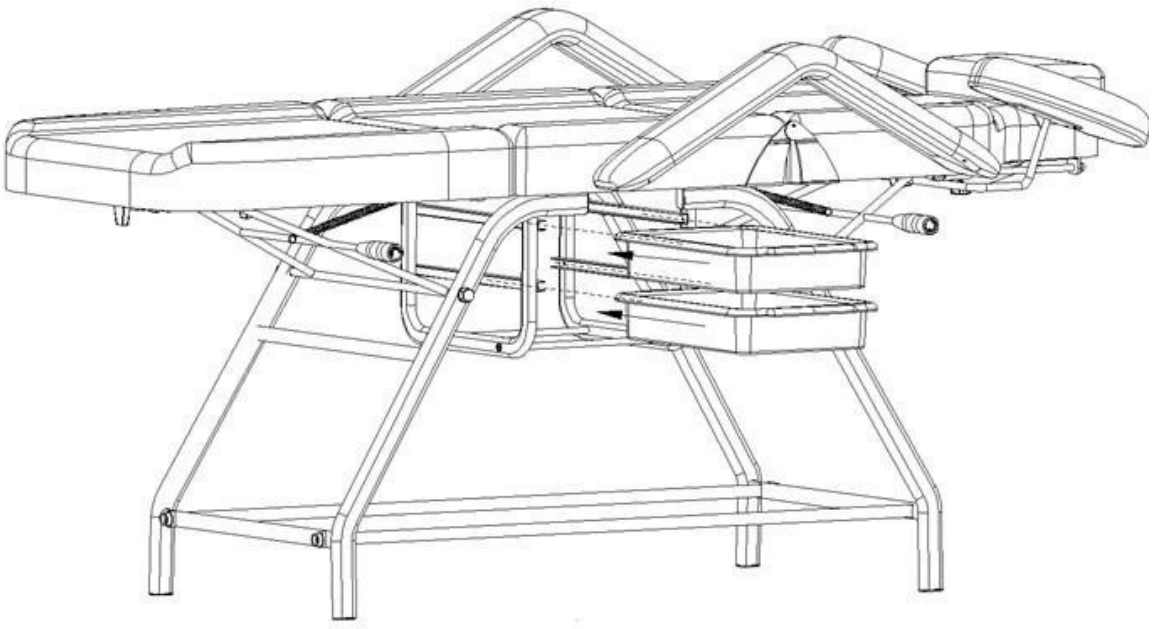

Seat functions:

1. Backrest adjustment

The angles of the backrest and footrest can be adjusted using a manual lever. Both the backrest and footrest have separate levers, allowing the height of each part to be adjusted independently. This allows the chair's settings to be customized to the client's individual needs, ensuring the treatment is as comfortable as possible. The chair can be reclined all the way to a lying position.

To raise the backrest, grasp the lever, lift it up, and set it to the desired height.

2. Lowering the backrest
   Hold the backrest with one hand, and with the other hand, grasp the lever handle and lower it until it reaches the desired position. Once you have reached your preferred height, release the lever.



Cleaning and Disinfecting the Device:

• To keep the chair's surface in good condition, clean it regularly. Remember to clean and disinfect the chair after each use. It is recommended to perform a thorough disinfection once a month.

I Metal and plastic surfaces

• To clean metal and plastic surfaces and controls, wipe them down with a damp cloth. A small brush works well for cleaning hard-to-reach areas or corners. Do not use too much cleaning solution on the device. Then disinfect the device with an appropriate disinfectant.

II Stainless Steel Surfaces

• A mild detergent solution works best. Ammonia and most solvents can be used to remove stubborn stains. Avoid chlorine-based solutions.

III Painted or chrome-plated metal surfaces

- Do not use water jets (showers, high-pressure water cannons) for cleaning.
- Do not clean the device in high temperatures or high humidity, and do not expose it to conditions that could cause liquid spills.
- Do not use solvents or acids for cleaning.

IV Seat Surface

• Wipe the chair surface evenly with a special leather cleaner, then wipe it with a clean, soft cloth.

SAFETY PRECAUTIONS

1. This device is professional equipment intended for use in beauty salons. Operation of the device exclusively by qualified beauty professionals prevents undesirable effects during the treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands—to ensure that no liquids enter the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Sp. z o.o. in the following cases:

a) liquid has entered the device, b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged, d) the device has been knocked over or its casing has been damaged.

5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet each time after you finish using the device.
7. Do not insert anything into the opening on the device. If a foreign object enters the opening, unplug the device and contact your dealer or the manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off, and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of operation, damage, or even fire.

NOTE:

1. If the power cord is damaged or if any other malfunctions occur, contact an authorized service center to avoid any danger.
2. This device may be used by children aged 8 years and older, as well as by persons with reduced physical or mental capabilities or lack of experience and knowledge of the equipment, provided that supervision or instruction regarding the safe use of the equipment is provided so that the associated risks are understood.
3. The device is not intended for use by children. Do not allow children to play with the device.
4. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are nearby.

5. This electrical device is not a toy. Improper use or contact with the electrical device may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

DISPOSAL OF THE DEVICE



Used electrical devices, accessories, and packaging should be sent to recycling centers in accordance with environmental protection regulations. Electrical devices should not be thrown into containers for household waste. You should follow the rules regarding the disposal of this type of equipment. To protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment must be collected separately and then taken to collection points for waste electrical and electronic equipment. At the end of their useful life, as well as older devices, contain valuable components suitable for recycling; therefore, they should be sent for recycling. Therefore, they should be taken to appropriate collection points, and they can also be sent to ACTIVESHOP Sp. z o.o.

STORAGE AND TRANSPORT

The device should be transported at temperatures ranging from –20 °C to +50 °C exclusively in its original packaging. Store the device in a well-ventilated area with relative humidity not exceeding 75%. Operating temperature: from (+) 10 °C to (+) 40 °C. During storage and transport, do not throw or drop the device, or expose it to mechanical shocks or weather conditions.