ACTIVESHOP®

INSTRUCTIONS FOR USE

Giovanni D-09 Vapozone

Model: DT-8228 White



Scan for different languages

Importer:
ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building DC2A 54-610 Wroclaw, Poland
www.activeshop.com.pl
Rev. A/04/2025

Giovanni D-09 multifunctional wapozon with warm steam and ozone.
The vapozone is mounted on a tripod with adjustable height, which makes it much easier to perform treatments. The steam coming out of the device opens clogged pores, allows deep cleansing of the skin, oxygenates the skin and cleanses it of toxins. The treatment also improves blood circulation.


Action of the device:

1. Softens the skin,
2. Disinfects pores,
3. Expands pores,
4. Stimulates blood circulation to the skin,
5. Facilitates removal of blackheads and dead skin,
6. Moisturizes and refreshes the skin,
7. Improves the condition of the skin.

Technical data


Voltage	220-240V
Power	850W
Rated frequency	50/60Hz
Capacity of water container	600ml
Steam temperature	Approx. 40°C
Weight	4kg

Dimensions of the device

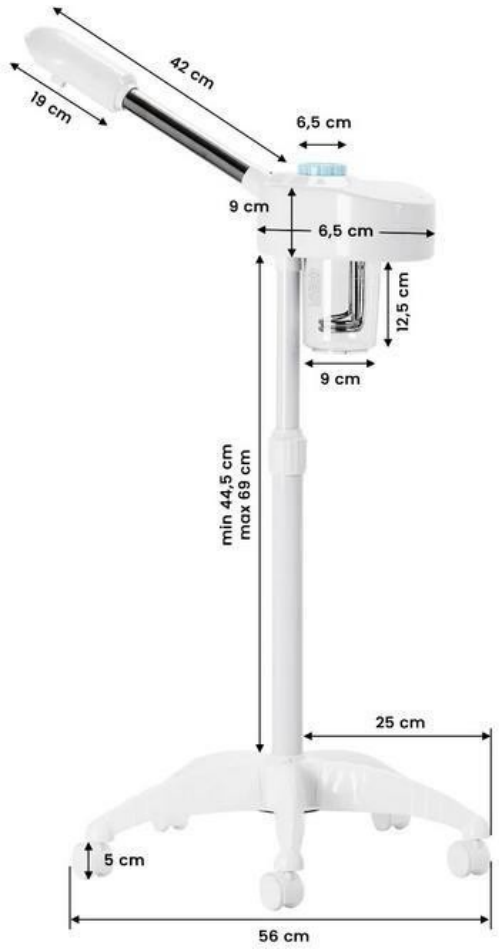

Preparation:

1. Before using the vaporizer, remove all packaging items.
2. Place the device in the place where it will be used. Preferably on a flat and stable surface.
3. Unscrew the water container and fill it with clean, preferably filtered water. Then screw the cap on tightly.
4. Connect the device to a proper power source.
5. To turn the device on, hold down the HOT button for a long moment.
6. The device will beep (buzz) if there is no, dirty or insufficient water.
7. To start the hot steam treatment, refill the water tank to full and hold down the HOT button. The heater will begin to heat the water, and after a few minutes, warm steam will be emitted. Again hold the HOT button to turn off this function.
8. To turn on the ozone function, hold the LIGHT button for a long time. The ozone will turn on, and the amount of
   steam will increase. Hold the button again to turn off this function.

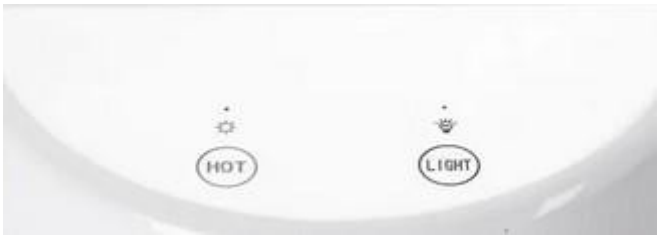

9. The head of the vaporizer can be rotated freely.

Instructions for using the device:

1. Keep the nozzle about 20cm away from your face to avoid burns.
2. Steam will begin to come out after a few tens of seconds after turning on and heating the device.
3. If the amount of water is insufficient, the steam output will gradually decrease. The device will turn off if there is not enough water.
4. Do not remove the water container immediately after turning off. Wait about 10 minutes for the container to cool down. This will avoid possible burns.
5. If the device turns off automatically due to lack of water, wait about 2 minutes until the indicator light resets and the device will be ready to operate again.
6. Control the water level during treatment and refill the tank if the water level reaches the minimum.

FEATURES:

1. The device will automatically turn off when the water level in the tank is insufficient.
2. The device produces warm steam.
3. The device has an "ozone" function.

CAUTION!

Excessive use may be harmful to the skin. Initially, the device should be used only once a day, not more than 10 minutes. Use 2-3 times a week for normal skin and once a week for sensitive skin.

CAUTION!

Do not pour essential oils or any other liquid other than water into the water tank. This can lead to damage to the device or physical injury.

Recommendations:

1. It is forbidden to use the device near a bathtub, sink or other wet vessel. Do not use or store the device in the bathroom or other areas with high humidity. This may result in electric shock, fire or damage to insulation. Do not immerse the device in water.
2. It is forbidden for people who have a problem with heat sensation to use the device. This may cause burns.
3. It is recommended to stop using the device immediately if any pains or abnormalities on the skin or body.
4. Contraindications to using the product:
- Pregnancy, menstruation, hormonal disorders,
- Allergies, skin diseases, atopic dermatitis, very sensitive skin or sunburned skin,
- Skin injuries, eczema, swelling, etc,
- Recent surgical operations.
5. When connecting the plug, do not touch the metal parts of the plug. Turn off the power and unplug the plug from the outlet when you are not using the device
6. Clean the device periodically to prevent dust accumulation. Moisture and other factors can cause the insulation to break through. Prevent dust or other harmful elements from getting into the plug.
7. Do not wrap the power cord around the device, this may cause the cord to malfunction. Do not use the appliance when the cord or plug becomes hot or damaged, and when the plug is loose in the outlet.
8. Make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly connected to the outlet. Failure to do so may result in fire, electric shock or burns. Do not plug or unplug the device from the outlet with wet or damp hands. The cord may not be modified, stretched, excessively bent or twisted. Nothing heavy may be placed on the cord.
9. Do not allow children to use the device.
10. Do not use the device near flammable substances such as alcohols, solvents, gasoline, spray aerosols, etc. This may lead to explosion or fire.
11. Do not hit or throw the device. If the device is damaged by hitting or falling, you cannot continue using it.
12. Do not insert anything into the nozzle or pinch it, as this can lead to electrical shock. Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center
13. Do not touch the water tank when the equipment is on.

SAFETY MEASURES

1. The device is professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds,
(c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.

9. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage of power cord or other malfunctions, contact an authorized authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on how to use the equipment in a safe manner, so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC waste electrical and electronic equipment, waste electrical equipment should be collected separately, and then handed over to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.