ACTIVESHOP®

USER MANUAL

Spa Azzurro 838 Beauty Treatment Table, 4 motors, heated



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/03/2026

Scan for different languages


Thank you for choosing our product.
Please read the user manual before first use and keep it for future reference.

Assembly Instructions

1. Remove the lounger from the box and remove all packaging materials
2. Make sure the unit is undamaged
3. Place the product in its intended location
4. Plug the power cord into a wall outlet

Technical Specifications	
Rated voltage	220V / 240V
Rated frequency	50 Hz
Power	135W
Maximum load	200 kg
Mattress	12 cm thick, eco-leather upholstery
Net weight	103 kg

Remote control functions

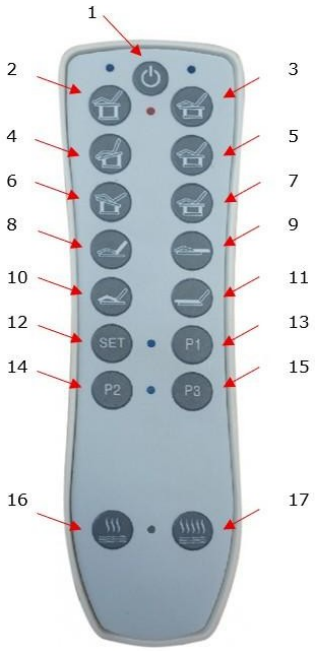

1. On / Off
2. Seat up
3. Seat down
4. Front column down
5. Front column up
6. Rear column down
7. Rear column up
8. Backrest up
9. Backrest down
10. Knee bend active
11. Knee flexion inactive (legs flat)
12. Programming button
13. Program 1
14. Program 2
15. Program 3
16. Heating - Level 1
17. Heating - Level 2


Programming the bed

1. Set the recliner to the desired position
2. Press and hold the SET button; when the LED next to it lights up blue, press P1, P2, or P3. The device will save the setting under the selected button.

Heating – press the selected heating level to turn it on; pressing it again will deactivate the function.

Note!

Pressing the on/off button will cause the lounger to automatically return to the resting position.

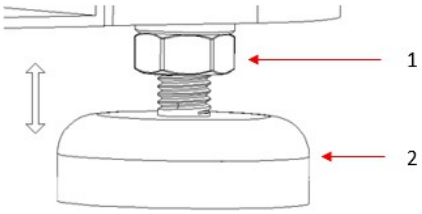


Rubber pads

The model is equipped with adjustable legs with rubber pads, which, thanks to a rotating screw, allow for precise leveling of the furniture even on uneven surfaces.
To adjust, turn the screw upward, as shown in the photo on the right.



Adjusting the armrests


With one hand, pull up the black lever located under the armrest and, while holding it, use your other hand to gently press the armrest down. Release the lever.

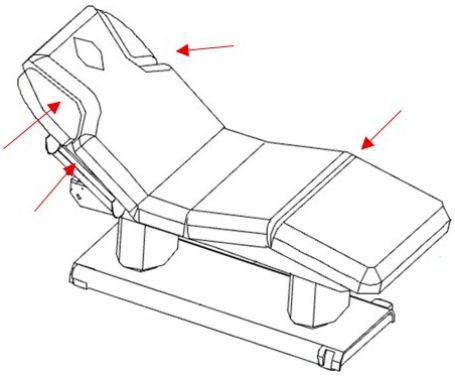


Warning!

Please remember not to insert your fingers or other body parts into the mechanism's gaps (marked with arrows in the photo) while adjusting the bed electrically. The gaps may narrow and cause injury.

Range of motion of moving parts

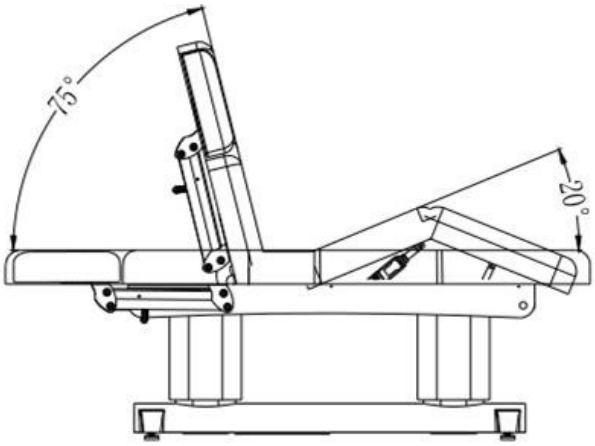

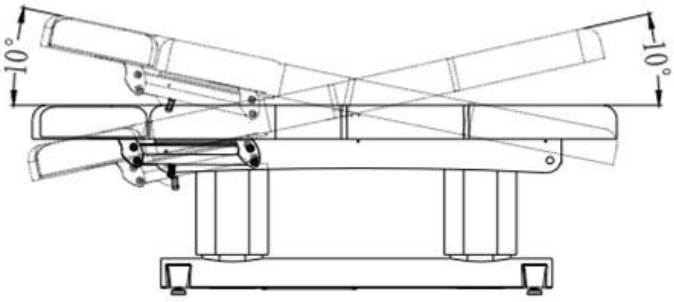

Backrest adjustment range: 0–75°
Knee bend adjustment range: 0–20°
Range of tilt adjustment resulting from lowering or raising a single column: 0–10°

Device dimensions



Total length of the lying surface 200 cm
Table height adjustment: min. 63 cm, max. 81 cm from the floor
Armrest height adjustment: min. 44 cm, max. 63 cm from the floor

Cleaning and Maintenance

To keep the surface of the lounger in good condition, clean it regularly, preferably after each use. Thorough disinfection is recommended once a month.

- We recommend wiping metal and plastic surfaces, as well as control elements, with a damp cloth. A small brush works best for cleaning hard-to-reach areas and corners. Do not use excessive amounts of liquid. After cleaning, disinfect the device with an appropriate disinfectant.
- Clean stainless steel surfaces with a detergent solution. Ammonia and most solvents work well for removing stubborn stains. Do not use chlorine-based solutions.
- Painted or chrome-plated metal surfaces
    - ✓ Do not use water jets (showers, high-pressure water cannons)
    - ✓ Do not clean in high temperatures or high humidity
    - ✓ Do not use solvents or acids
- Wipe the couch upholstery with a synthetic leather cleaner, then wipe the surface with a dry, soft cloth.

Safety precautions:

1. This device is professional equipment intended for use in beauty salons. Operation of the device exclusively by qualified beauty professionals helps prevent adverse effects during the treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands.

Ensure that no liquids enter the device.

4. Immediately unplug the device and contact the authorized service provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device,
   b) the device emits a strange odor, smoke, or unusual noises, c) the power cord is damaged, d) the device has been knocked over or its housing is damaged.
5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center— this will help prevent hazards.
2. This device may be used by children aged 8 years and older, by persons by individuals with reduced physical or mental capabilities, as well as by those unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on how to use it safely and that the associated risks are understood.
3. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
4. The device is not intended for use by children. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the can pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used electrical equipment must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable recyclable components; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively in its original packaging. It should be stored in a well-ventilated room with relative humidity not exceeding 90%. Operating temperature range: (+)10°C to (+)40°C. During processes
During storage and transport, do not throw or drop the device, or expose it to mechanical shocks or weather conditions.