

ACTIVESHOP®

Instructions for Use

UV LED Glow V1 lamp




Importer:

ACTIVESHOP SP. Z O.O.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/04/2024



UV LED Glow V1 lamp, is the latest generation, professional lamp, which quickly and evenly cures all gels, hybrid varnishes and other light curable preparations thanks to dual led technology. It emits white light that does not tire the eyes. The lamp has a "LOW HEAT MODE", which allows the lamp to heat up gradually up to 99s. Longer curing time and gradual increase of power will avoid wrinkling of the varnish.

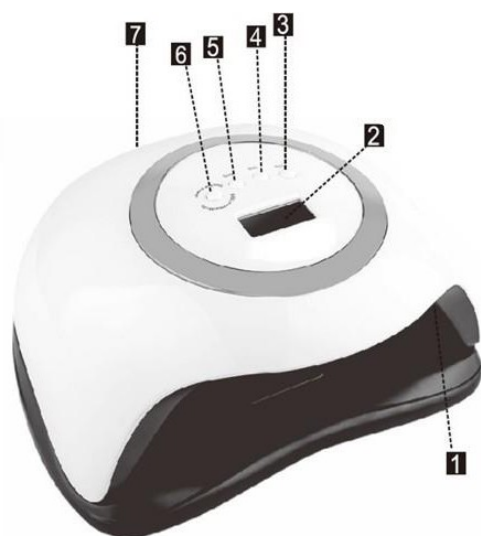

1. Infrared motion sensor
2. Screen
3. 10s time switch
4. 30s time switch
5. 60s time switch
6. 99s time switch (Low Heat Mode)
7. Power connector

TECHNICAL SPECIFICATIONS:

1. Lamp: UV+ LED
2. Rated output: 100/240V; 50/60Hz
3. Power: 168W
4. Light bandwidth: 365nm+ 405nm
5. Display: LCD digital display
6. Dimensions: 235x223x102mm
7. The lamp comes in two colors: white-gold and white-blue

INSTALLATION:

1. Connect the power supply to the lamp
2. Choose the appropriate time or put your hand into the lamp
3. There are 4 time buttons on the device 10S, 30S, 60S, 99S,

When you insert your hand into the lamp, the sensor activates the device. The maximum operating time, without selecting the appropriate mode, is 120s. The pull-out bottom of the lamp makes it easy to perform pedicure treatment.

NOTE!!!

The 99 seconds mode is that the power of the lamp gradually increases. It eliminates the burning sensation during the application of builder gels. The choice of time to cure hybrid varnish or gel mass should always be adjusted according to the brand manufacturer's recommendations.

RECOMMENDATIONS:

1. Read the instruction manual carefully before using the lamp for the first time.
2. Do not look directly at the LED light, as it may damage your eyesight.
3. Do not use the lamp if the power supply is damaged.
4. Exposure for too long can cause skin damage.
5. Use products designed for LED light curing.
6. Remember to unplug the device from the contact when you are done using it.
7. Keep the device away from children
8. Keep the device away from water or other liquids.
9. Keep the device away from flammable and combustible
10. The lamp is designed only for curing all kinds of hybrid polish and gel masses, not for regular nail polish. Make sure your nail polish what compatible before use.

PRODUCT FEATURES:

1. **UV/LED Dual Light.** 2x faster curing than traditional nail lamps, ability to save time
2. **Four time settings** - 10s, 30s, 60s, 99seconds, you can set the time based on different nail polish Nails and nail condition.
3. **Low Heat Mode.** Heat mode (gradually heats up) to solve all the nail plate burning problems caused by curing gels
4. **LCD Display.** Easy to read the time when using day or night.
5. **Removable bottom tray.** Easy to remove, this helps with footwork.
6. **Automatic infrared sensor. Without touching the button in time, the lamp will automatically turns on/off with hands in and out of the lamp.**
7. **Protects eyes and skin. Instead of the usual violet light, the nail lamp uses soft white light, which is painless and harmless to nails, eyes and skin.**

CAUTION!!!

Do not soak the device. Do not disinfect with excessive amounts of liquid. Water or disinfectant liquid getting inside the device, may damage it. It is recommended to maintain the UV/LED lamp with special products.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows you to avoid undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in the this operating instructions. All service and repair work must be performed only by an authorized service employee service center (ACTIVESHOP Sp. z o.o. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP Ltd. in the following cases:
 - a) liquid got into the device,
 - b) the device emits a strange odor, smoke or makes strange sounds,
 - c) the power cord has been damaged,
 - d) the unit has been overturned or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device in places where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. In case a foreign object gets into the opening remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the unit on an unstable cart, shelf or vehicle. If dropped, the device may be damaged damage.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise there is risk of incorrect operation of the device its damage or even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years of age and by people with reduced

physical capabilities, mental capabilities and persons with inexperience and lack of familiarity with the equipment, if the following is provided

is provided

supervision or instruction on the use of the equipment in a safe manner, so that the associated risks are understood.

3. The device is not intended for play by children. Do not allow children to play with the device.

4. Do not leave the device unsupervised when children or persons without sufficient knowledge of the regarding

use of the appliance are in its vicinity.

5. This electrical appliance is not a toy. Improper use or contact with the appliance electrical device

may pose a health risk or lead to death, so the device should be used and stored out of the reach of children.

DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance



with environmental protection principles. Electrical appliances should not be dumped into containers with household waste. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment should be collected separately and then transfer to points of collection used equipment

electronic and electrical equipment. At End of usability, a also old devices contain full-value recyclable components, so donate them to the

reprocessing. Therefore, they should be handed over to the appropriate collection points, and they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.